BARIX
THE VOICE OF SIMPLICITY

Store & Play

Automatic download and scheduled playback of playlists.

Application User Manual v1.1

Store&Play Firmware	vb1.31
Released	1st May 2014
Supported on	Exstreamer Store&Play

Revision Table

Date	Version	Who	Change
23/04/14	1.0	JAP	First version of the User Manual for Store&Play vb1.31
07/05/14	1.1	JAP	Added QIG in Appendix, noted PORT defaults vb1.31, added Tips&Tricks “NeverPlay.m3u”.

Table of Contents

1 INTRODUCTION 4

1.1 About the Store&Play application 4
1.2 Store&Play main features 4
1.3 Installing the device 5
1.4 Local storage media 5
1.5 Store&Play Firmware version 5

2 STORE&PLAY CONFIGURATION FILES 6

2.1 Player.cfg configuration file 6
2.2 Player.cfg configuration variables 7
2.3 M3U Playlist format 10

3 CONFIGURATION OF THE SYSTEM 11

3.1 Playlists creation 12
3.1.1 Playlist configuration parameters 12
3.1.2 Playlist creation Tips and Tricks 12
3.2 Generation of player.cfg 13
3.2.1 Player.cfg configuration parameters 13
3.2.2 Player.cfg generation Tips and Tricks 14
3.3 Upload all files to corresponding servers 15
3.4 Activate the Exstreamer Store&Play player devices 15
3.4.1 Using external USB memory stick 15
3.4.2 Using internal microSD card 16
3.5 Device monitoring 17
3.5.1 BariMon monitoring 18
3.5.2 SYSLOG monitoring 20
3.6 Updating Playlists and Configuration 21
3.6.1 Updating Playlists 21
3.6.2 Ad Insertion Playlists 21
3.6.3 Localized Content 22

4 WEB USER INTERFACE (WEB UI) 24

4.1 HOME tab 25
4.2 SETTINGS tab 27
4.2.1 NETWORK SETTINGS 28
4.2.2 TIME SETTINGS 30
4.2.3 APPLICATION SETTINGS 31
4.2.4 FALLBACK CONFIG SERVER SETTINGS 32
4.2.5 SECURITY SETTINGS 33
4.3 PLAYLISTS tab 34
4.4 STATUS tab 35
4.5 FILES tab 37
4.6 LOGS tab 38
4.7 DEFAULTS tab 39
4.8 UPDATE tab 40
4.9 REBOOT tab 41

5 DICTIONARY 42

6 APPENDIX: QUICK INSTALL GUIDE 43

7 LEGAL INFORMATION 46

1 Introduction

1.1 About the Store&Play application

The Store&Play application is especially designed to support audio distribution via IP networks when a fast or reliable network is not guaranteed at the player locations. This is also useful in cases where network bandwidth is limited in such a way that real-time streams are not an option to deliver the audio.

The Store&Play application runs on a new generation of hardware and is backwards compatible with Barix's FTP_MP3 firmware in the sense that Store&Play devices are configured and operate in the same way as Barix's Exstreamers with the FTP_MP3 firmware loaded on them. Store&Play takes advantage of the new hardware platform and components to offer faster operations and a significant performance improvement.

The audio playback is controlled via Playlists based on M3U format with a special BARIX configuration line defining the Playlist activation with specific Times and Dates and other playback settings such as Volume and Shuffle mode. The application can use either the FTP or HTTP protocols to automatically download the configuration file and Playlists with their corresponding MP3 audio files, and stores them on an external USB stick attached to the device or into an internal microSD card. Store&Play devices then play the downloaded music according to the configuration, schedule and playlist priority.

The application can also be used as a standalone player, without any network connection at all: in this case the system requires that the configuration and all media files are present in the local storage drive (USB or microSD). In this mode, a preloaded USB stick can be sent to the player location and simply inserted into the device for playback to start.

1.2 Store&Play main features

- Plays MP3 tracks from BARIX-formatted M3U playlists
- Automatic downloads from FTP or HTTP Configuration and Content servers
- Local storage in attachable external USB stick or internal microSD card
- Remote firmware upgrade via web UI
- Automatic updates at predefined time intervals or at a specific time windows every day
- Supports a hundred playlists and 10'000 audio tracks
- Playlists can be scheduled to be played at configured times and days of the week
- Playlists can be restricted to be valid only for a specified date range
- Control and configuration is possible using any text editor and any web browser
- Fallback Configuration server settings in case of broken or missing configuration
- Embedded RTC keeps track of time even if NTP is not available to ensure timely playback
- Monitoring via Logs from web UI, Barimon[1] and SYSLOG
- Automatic network configuration (DHCP) as well as manual static IP address
- Long file name format support for Playlists and Tracks
- Configurable Playlist Volume, Shuffle and Interruption modes
- SonicIP® announcing the IP address on power up over the audio outputs

[1] See http://www.barimon.net/: Automated monitoring and alerts service.

1.3 Installing the device

Please follow the instructions contained in the “Quick Install Guide” supplied with the device to install the hardware. This document explains how to install the Exstreamer Store&Play and how to configure the Network settings to enable web UI access to the Exstreamer Store&Play from any browser in the network.

A printed version of the “Quick Install Guide” is included in the device packaging and can also be downloaded from www.barix.com. There is a copy of the Quick Install Guide in the Appendix of this User Manual.

1.4 Local storage media

Exstreamer Store&Play devices support 2 types of local flash memory drives for storage of configuration and media files. It is possible to attach an external USB memory stick to the USB 2.0 interface, or to use an internal microSD memory card. The Store&Play device can be supplied with an internal microSD card pre-installed and pre-formatted in EXT4. Please note that Barix does not supply USB memory sticks.

In case of using USB sticks for Store&Play it is strongly recommended to format them in a journaling File System (for example EXT4) and try to avoid using non-journaling File Systems such as FAT. Journaling File Systems provide additional robustness against file system corruption. The web UI of the Exstreamer Store&Play can be used to format external USB sticks and internal microSD cards to EXT4 (DEFAULTS tab).

The Storage Media to be used by the application is selected from the SETTINGS tab of the web UI. The Store&Play application is set by default to use the USB memory stick but for increased security and reliability, BARIX recommends using the internal microSD card.

1.5 Store&Play Firmware version

The currently loaded Store&Play version is displayed in the STATUS tab and in the top right corner of the web UI under “FW”.

Barix recommends using always the latest version of the application. Newer versions of Store&Play firmware will be regularly published to www.barix.com. Please check the website or contact support@barix.com to make sure the latest application firmware is installed on the devices.

2 Store&Play configuration files

Exstreamer Store&Play requires a local flash memory to store the entire media content to be played (special M3U Playlists and MP3 files) and most importantly the player.cfg configuration file. These files can be stored either on a USB memory stick (formatted in FAT or EXT4) or on an internal microSD card (formatted in EXT4).

2.1 Player.cfg configuration file

The configuration file (player.cfg) is mandatory and it has to be present in the Player Directory (by default the root directory) of the selected Storage Media (by default the USB) of the Exstreamer Store&Play. Many settings of the configuration of the Exstreamer Store&Play are set in this configuration file.

The configuration file is a plain ASCII text file consisting of comment and command lines. Any lines beginning with '#' are considered to be comments, and are ignored by the Exstreamer Store&Play.

Command lines within the file should be in the form:

VARIABLE=value

When a VARIABLE is assigned different values on different lines of the file, the last assignment is used.

Some VARIABLES are mandatory for the correct operation of the Store&Play. If a mandatory VARIABLE is not specified otherwise in the player.cfg, Store&Play will use the default value.

Any plain text editor (Notepad, Vim, TextEdit, etc.) can be used to create or edit this file. Lines can be ended with CRLF (as usual on Microsoft Windows) or LF (as usual in the Unix world). Word processors (Microsoft Word, OpenOffice.org, etc.) are not intended for editing plain ASCII text files, and should not be used.

If the configuration file is not found in the selected Storage Media (default USB) and Player Directory (default root) at boot, the application will contact the “Fallback Configuration server” to try to fetch it. The “Fallback Configuration server settings” are the credentials needed to fetch the player.cfg from the default Configuration Server and can be set in the web UI of the Exstreamer Store&Play under the SETTINGS tab.

In case there is no configuration file in the selected Storage Media / Player Directory and the configured “Fallback Configuration Server” is not reachable, the Exstreamer Store&Play will try to use the latest player.cfg that was used in the device stored on the internal NAND memory.

A sample configuration file can be downloaded from the web UI of the Exstreamer Store&Play (HOME tab, under the Help column). Users can edit this file to match the settings of their installation.

Another way of creating player.cfg files (and associated BARIX-formatted M3U playlists) is using the configuration software “FTP MP3 Server Tool” available from www.barix.com/downloads.

2.2 Player.cfg configuration variables

This table defines all the variables in the configuration file for controlling Store&Play:

Variable Name *(group)*	**Description**	**Default value**
Content server credentials		
MUSIC_SERVER	Hostname/IP address of the audio content server	demo.barix.com
MUSIC_PROTOCOL	Protocol to use for downloading files: FTP or HTTP	FTP
MUSIC_PORT	Music server port (e.g.: 21 for FTP, 80 for HTTP)	21
MUSIC_USERNAME	Username (used only for FTP)	music
MUSIC_PASSWORD	Password (used only for FTP)	cisum
MUSIC_DIR	Directory containing all M3U and MP3 files	music/
MUSIC_UPDATE	Playlist update interval in seconds	0 (disabled)
Configuration server credentials		
CONFIG_SERVER	Hostname/IP address of the server storing player.cfg	demo.barix.com
CONFIG_PROTOCOL	Protocol to use for downloading files: FTP or HTTP	FTP
CONFIG_PORT	Configuration server port (e.g.: 80 for HTTP)	21
CONFIG_USERNAME	Username (used only for FTP)	config
CONFIG_PASSWORD	Password (used only for FTP)	gifnoc
CONFIG_DIR	Directory on the server where player.cfg resides	config/
CONFIG_UPDATE	Configuration update interval in seconds. Note that a Configuration update includes a Playlist update	3600 (1 hour)
Network Time Protocol and Time Zone settings		
NTP_SERVER	Hostname/IP address of the NTP server to acquire UTC time reference from the network	0.barix.pool.ntp.org
LOCALTIME	Offset from UTC in hours (e.g.: +1 for CET, -6 for PST)	+2 (CEST)
BariMon monitoring and alerting server settings (optional)		
BARIMON_SERVER	BariMon server hostname/IP address	www.barimon.net
BARIMON_PORT	BariMon server port	80
BARIMON_INTERVAL	BariMon notify messages sending interval in minutes	10
Deletion and Playback settings		
NO_DELETE	The application deletes all unused files after every Playlist update in order to free up space in the local Storage Media. Set to 1 for disabling all deleting of files	0 (enable delete)
QUICK_PLAY	1 - Upon application start: First start playing, then update playlists and download new files 0 - Upon application start: First update playlists and download all new files, then start playing	1 (start playing as soon as possible)
Updating time window settings		
UPDATE_DAILY_TIME (*) (*) If set, disables regular interval updates defined in MUSIC_UPDATE and CONFIG_UPDATE	Time to start downloading configuration and audio files and updating system time. It can be configured between 00:00-23:59 hours. Any value greater than 23:59 hour will disable this feature. Minute part will be ignored if that is greater than 59 minutes (hh:mm format)	Not set
UPDATE_DAILY_DURATION	Specifies how long the download process should continue once started. Only valid if UPDATE_DAILY_TIME is set (hh or hh:mm format)	Not set
Playlists definition		
PLAYLIST=InsertedAd.m3u PLAYLIST=Announce.m3u PLAYLIST=… PLAYLIST=Background.m3u	List of all the playlists with the special Barix M3U format that are going to be used. Its order determines its priority: the higher up in the list, the higher the priority of the playlist.	-

Content server credentials

These variables set the login credentials to the FTP or HTTP server that stores all the MP3 tracks and the Barix-formatted M3U playlists that are going to be used by the Store&Play application.

These login credentials are mandatory unless Exstreamer Store&Play is used in a standalone (offline) mode.

The MUSIC_UPDATE variable allows the user to set an automatic periodical update of all the playlists present in the configuration file. This means that every MUSIC_UPDATE seconds, the Exstreamer Store&Play will connect to the Content server, download all the M3U playlists defined in the current player.cfg and check if it has to download any new MP3 files. After downloading the MP3 files and if NO_DELETE is set to 0 (default value) the Exstreamer Store&Play will automatically delete all MP3 files that are not present in the Playlists in order to free up space in the selected Storage Media.

Note that if updating time window is set (see below), the periodical playlist update defined with MUSIC_UPDATE will be ignored.

Configuration server credentials

These variables set the login credentials to the FTP or HTTP server that stores the configuration file (player.cfg) to be used by the Store&Play application. Note that the Configuration server can be the same as the Content server but in some cases it's convenient to store the configuration file on a separate server or directory in order to easily manage multiple devices with different configurations.

These login credentials are mandatory unless Exstreamer Store&Play is used in a standalone (offline) mode.

The CONFIG_UPDATE variable is used to define an automatic periodical update of the player.cfg. This means that every CONFIG_UPDATE seconds, the Exstreamer Store&Play will connect to the configuration server and download a new player.cfg, then triggering a MUSIC_UPDATE to download again all the M3U playlists defined in the new player.cfg and all the new MP3 files included in those playlists.

Note that if updating time window is set (see below), the periodical configuration update defined with CONFIG_UPDATE will be ignored.

Note: Store&Play vb1.31 (corrected in future versions) sets the default CONFIG_PORT and MUSIC_PORT to "0" as default if not specified otherwise. Please specify ports "21" if using FTP or "80" if using HTTP with this variable on the player.cfg to allow downloading of files.

Updating Time Window settings

These variables are used to set a time window when downloading of files is allowed. This can be used to restrict the network usage of Exstreamer Store&Play devices to certain hours of the day or the night, to ensure that the download process does not affect network performance for example during shop opening hours.

If UPDATE_DAILY_TIME is set, it will disable the periodical updates defined with MUSIC_UPDATE and CONFIG_UPDATE.

Network Time Protocol and Time Zone settings

NTP is the most commonly used protocol for clock synchronization in networked devices. NTP servers provide accurate UTC (Coordinated Universal Time) reference that the Exstreamer Store&Play uses to set the time in the device and schedule the playback of the Playlists accordingly. The variables in the configuration file allow the user to define the NTP server to be used as well as the Time zone settings with an offset to UTC.

Once the Exstreamer Store&Play has been able to successfully connect to the NTP server and acquired the UTC time, the valid time reference will initialize the internal RTC (Real Time Clock) of the device and it will store the current time. RTC is able to keep the time reference even after power-failures or when the NTP server is not reachable to ensure timely playback of playlists.

Please note that the Local Time Zone has to be set with LOCALTIME variable.

BariMon monitoring and alerting server credentials

These variables set the BariMon server credentials. BariMon is a Web portal that carries out three simple functions:

1. It collects data posted from devices (or via a Web browser) through the Internet.
2. It makes this data (and statistics and history) available in the Web browser (graphical) or for download (CSV)
3. It informs by Email in case of alarms, or if a device has not reported for a certain time period. This way, users can quickly react to failures.

In order to use BariMon, the user can create a free demo project that supports up to 5 devices. For more information please visit www.barimon.net

Deletion and Playback settings

In order to prevent the deletion of unused files in the Storage Media, NO_DELETE variable can be enabled. If this variable is not specified (default behavior), the Exstreamer Store&Play will delete all MP3 files that are not mentioned (not used) in the Playlists listed in the configuration file.

Please make sure there is enough space in your Storage Media before setting NO_DELETE to 1. The available space of the Storage Media can be checked in the STATUS tab of the Web UI.

QUICK_PLAY variable is used to define the mode of operation when starting the application. It is enabled as default (set to 1), so the device will start playing even if not all the MP3 files in the configuration have finished downloading. If disabled (set to 0) the Exstreamer Store&Play will wait until the download of all the missing MP3 files from the Playlists present in the configuration file has finished before starting playback. If there are many new files to be downloaded, this can result in a long delay before starting the playback of the first song.

Playlist definition

This section lists all the specially BARIX-formatted M3U Playlists that are part of the configuration sorted by priority, meaning that higher Playlists in the list will have higher priority. If two or more Playlists are valid at any given time, the higher priority Playlists will be played.

2.3 M3U Playlist format

Store&Play uses a special Playlist format based on the standard M3U Playlist format. If the first line of the M3U Playlist begins with "#BARIX-4", it is considered as a configuration line for the Store&Play application. Any other line beginning with '#' is considered a comment and will be ignored by Store&Play.

Store&Play supports playback of MP3 files (CBR/VBR up to 320 kbps 48 kHz). These MP3 files must reside on the same Content Server and in the same directory as the M3U Playlists. Long names in UTF-8 format are supported for both MP3 and M3U files.

Before a standard M3U Playlist can be used with Store&Play, it must have an extra configuration header line added. Users can generate M3U playlists with any software tool and add the special Barix configuration header line with any text editor to be able to use them with Store&Play.

Alternatively, the configuration file (player.cfg) and BARIX-formatted Playlists can be created using the configuration software “FTP MP3 Server Tool” available from www.barix.com/downloads.

The special Barix configuration header line includes information that establishes the validity period of the Playlist, as well as some playback settings such as the Repeat counter to limit the number of playbacks of the Playlist, the Volume at which it should be played and the Interruption and Shuffle flags.

The BARIX header line for the M3U Playlist has the following syntax:

#BARIX-4, START_DATE, END_DATE, DOTW, START_TIME, END_TIME, REPEAT, VOLUME, INTERRUPT, SHUFFLE

Note: No spaces are expected between variables and commas. All variables are optional except #BARIX-4 so the minimum necessary header configuration line in the Store&Play M3U Playlist would be #BARIX-4,,,,,,,,,

Variable	**Description**
START_DATE	Format DDMM or DD-MM-YY. If set, the Playlist is not played before the given date (Default: not set)
END_DATE	Format DDMM or DD-MM-YY. If set, the Playlist is not played after the given date (Default: not set)
DOTW	Used to define the Days Of The Week (MOTUWETHFRSASU) that the Playlist is active. E.g., FRSU will play only on Fridays and Sundays (default: not set)
START_TIME	Format HHMM or HH:MM:SS. If present, Playlist is not played before this time of day (Default: not set)
END_TIME	Format HHMM or HH:MM:SS. If present, Playlist is not played after this time of day (Default: not set)
REPEAT	Playlist is played only REPEAT times between MUSIC_UPDATEs. Only "completed" playbacks are counted (Playlist has not been interrupted by another higher priority Playlist during playback). Counter is reset at every MUSIC_UPDATE. E.g., 1 - Play only once 0 - No playback at all -1 - Loop mode (continuous playback)
VOLUME	Playlist volume can be set from 0 to 100 (in %)
INTERRUPT	Interrupt flag can be set to 0 (default) or 1: 0 - Wait for song from current Playlist to finish before starting this Playlist 1 - Start playing this Playlist exactly at START_TIME (interrupt song from current Playlist)
SHUFFLE	Shuffle playback mode can be set to 0 (default) or 1: 0 - Do not shuffle Playlist 1 - Shuffle Playlist

3 Configuration of the system

The Exstreamer Store&Play is highly configurable to suit a number of environments. As a result of this, there are many configuration settings. In most cases only a few settings are actually needed to be changed from default values to achieve the desired behavior.

It is important to understand that configuration of the system falls into several categories:

- Initial configuration of the Store&Play device
  - Hardware installation (see Quick Install Guide)
  - Network Settings (see Quick Install Guide and Chapter 4.2.1)
  - Playlists and player.cfg generation (see Chapters 2 and 3.1, 3.2)
  - Upload files to Content and Configuration Servers (see Chapter 3.3)
  - Copy/Download files to local Storage Media (see Chapter 3.4)

- Day-to-day operation of Exstreamer Store&Play
  - Monitor the Store&Play operation (see Chapter 3.5)
  - Update configuration and Playlists on the servers (see Chapter 3.6)

3.1 Playlists creation

3.1.1 Playlist configuration parameters

Store&Play users have to generate at least one playlist in the special M3U format (see previous chapter 2.3) containing songs, announcements, advertisements and whatever other audio content is to be played. Note that all audio tracks in the playlist have to be in MP3 format.

At this stage, the user can define the active time window of the playlist (defining START/END DATE, DOTW and START/END TIME for which the playlist should be valid), the VOLUME at which the playlist should be played and playback options such as SHUFFLE or INTERRUPT.

If only Background music is desired to be played, a single playlist containing all the MP3 tracks will suffice.

In an environment that requires Ad Insertion or Announcement playbacks at specific times, multiple Playlists will have to be created, each of them containing the Ads or Announcements to be inserted and the corresponding validity period.

Playlist START_TIME and END_TIME cannot wrap up beyond 24h. In other words, a playlist cannot be defined to start at 23:00, and stop at 02:00 on the next day. In this case two playlists should be created, containing the same songs – the first one to start at 23:00 and stop at 23:59, and the second one to start at 00:00h, and stop at 01:59.

3.1.2 Playlist creation Tips and Tricks

1) Use the configuration software “FTP MP3 Server Tool” to directly generate playlists with the special M3U format that is required for Store&Play operation. Alternatively, you can manually add the #BARIX-4 line with a plain text editor at the beginning of your standard M3U playlist file.

2) It is recommended to set the SHUFFLE flag for lower priority playlists (e.g., Background Music playlists) to avoid repeating the same first songs and sequence after every interruption (e.g., after every inserted Advert Playlist playback).

3) It is advisable to set the REPEAT flag to -1 (Loop mode) when the lower priority Background playlist active time is longer than the actual playback time of the playlist in order to avoid silences.

4) Enable the INTERRUPT flag for higher priority playlists such as those containing Advertisements and Announcements, ensuring that the playback will start exactly at START_TIME.

3.2 Generation of player.cfg

The player.cfg is the single and most important configuration file for Store&Play devices. This plain text file has a number of variables that can be set (see complete list in section 2.2) that define the mode of operation of the whole Store&Play solution.

3.2.1 Player.cfg configuration parameters

Server credentials: player.cfg contains the credentials and logging information for automatically accessing the MUSIC_SERVER to download the MP3 tracks and M3U playlists as well as the credentials for accessing the CONFIG_SERVER where the latest player.cfg will be located.

Time settings: For scheduled playback (playlists containing any of START_DATE, END_DATE, DOTW, START_TIME and END_TIME settings) the user will need to define an NTP_SERVER and adjust the local time zone offset with LOCALTIME variable. Note that Store&Play player devices are equipped with an embedded Real Time Clock (RTC) that keeps track of the current time even if the NTP server is not reachable at any given time, for example after a reboot of the device. However the RTC needs to be initialized with at least one successful NTP time acquisition in order to be able to keep the time reference.

Monitoring server: For monitoring purposes and reporting track plays, it can be interesting to enable the BARIMON_SERVER. Please check www.barimon.net for more information about Barix's online monitoring service.

Delete option: In order to avoid filling local storage space with unused tracks and playlists, make sure to disable the NO_DELETE option (it is already disabled by default).

Quick Play: Users can enable QUICK_PLAY to minimize the time to play at start-up. With this feature enabled, the device will start playing immediately after boot-up according to the configuration settings in the local copy of player.cfg and the playlists and tracks already present in the local storage. If QUICK_PLAY is disabled, the device will first download the new version of player.cfg in the CONFIG_SERVER, check the new configuration and playlists and download all the missing files before finally start playing according to the new configuration.

Restricted update time windows: In order to preserve network bandwidth for critical applications such as supporting the cashier machines and POS equipment during shop opening hours, it is recommended to use the UPDATE_DAILY_TIME variable to concentrate all downloading operations at times when the shop activity is low or nonexistent like for example during the night. At the same time, the user can define the duration of the downloading time window with UPDATE_DAILY_DURATION variable.

Playlist priority: Last but not least, the player.cfg file contains the name of the PLAYLIST(s) that the device will play. It is very important to note that the order of the Playlists appearance in the player.cfg file determines its priority. This means that if 2 (or more) playlists are active (within a valid period defined by DATE, DOTW and TIME) at the same time, the player will select to play the one with the highest priority (listed on top).

3.2.2 Player.cfg generation Tips and Tricks

1) Use the configuration software “FTP MP3 Server Tool” to directly generate a player.cfg configuration file without the need to use a plain text editor.

Note: The current version 2.11 of FTP MP3 Server Tool is fully compatible with former FTP MP3 firmware and therefore it will automatically convert all file names to an 8.3 format and removing ID3 Tags, which is actually not required for the Store&Play application. This software tool also provides support for generating all LEN files corresponding to the FTP_MP3’s CHECK_LENGTH option.

2) In order to use Store&Play as a standalone player without any network connection at all, the player.cfg only needs one single line defining the PLAYLIST to be used. Of course, the M3U playlist and all its related MP3 files have to be present in the local storage drive of the player.

3) It is possible to use the same MUSIC_SERVER as the CONFIG_SERVER, so that all needed files are in the same server and directory using the same credentials to access it. However, it is convenient in some applications to use multiple CONFIG_SERVERs or directories, each with a different player.cfg with different settings, while sharing the same pool of content from the same MUSIC_SERVER.

4) Make sure that the order of appearance of the PLAYLISTs in player.cfg matches the required priorities. For example, PLAYLISTs containing Ads and Announcements should always be placed on top of lower-priority PLAYLISTs such as those containing Background music.

5) If UPDATE_DAILY_TIME is set (recommended unless Playlists and/or configuration changes are required very often during the same day), MUSIC_UPDATE and CONFIG_UPDATE intervals will be ignored.

6) Every CONFIG_UPDATE implies a MUSIC_UPDATE but not the opposite. During a CONFIG_UPDATE, the Store&Play device will first fetch the new player.cfg from the CONFIG_SERVER, go through the PLAYLISTs that have been defined in this new player.cfg file and then perform a MUSIC_UPDATE, that is to download all Playlists again from the MUSIC_SERVER, even if there were Playlists with the same name already present in the local storage. After that, Store&Play will go through all the MP3 files listed in those Playlists and download the ones that are missing in the local storage.

7) At every boot-up there will automatically be a CONFIG_UPDATE. Note that even if UPDATE_DAILY_TIME has been set and the boot-up happens to be out of the allowed-downloading window of time, the Store&Play device will still download all the files including the player.cfg, the M3U playlists and the content (MP3 files).

8) Store&Play is not able to detect changes in the content of music files (MP3) in the MUSIC_SERVER. In order to force the Store&Play device to download the music files again in the next MUSIC_UPDATE, these have to be renamed (and the new name has to be used in the playlists accordingly).

9) If NO_DELETE=0 (as it is by default) the Store&Play device will search for files that are no longer used after each MUSIC_UPDATE during the cleanup phase. All files in the local storage that are not the player.cfg neither mentioned in player.cfg nor mentioned in any of the PLAYLISTs will be deleted from the local storage drive.

10) In order to prevent deletion of files even with the default NO_DELETE=0, users can include a special Playlist (for example called "NeverPlay.m3u") that contains all the audio files that the user wants to keep in the local pool of music. However this Playlist is never active (for instance with an END_DATE in the past). This way the Store&Play device will never delete the files that are in this Playlist and will not play the files unless they are mentioned in the configured active playlists.

3.3 Upload all files to corresponding servers

After the generation of the Barix Playlists (M3U files) and the configuration file (player.cfg) the next step is to upload all the files to the corresponding servers.

Using the credentials of the MUSIC_SERVER defined in player.cfg, the user needs to upload all M3U and corresponding MP3 files to make these files available for downloading to all the Store&Play devices.

Using the credentials of the CONFIG_SERVER defined in player.cfg, the user needs to upload the player.cfg to make it available for downloading to all Store&Play devices.

Note: If CHECK_LENGTH option was enabled for FTP_MP3 backwards compatibility, all related LEN files would also need to be uploaded to the corresponding servers.

3.4 Activate the Exstreamer Store&Play player devices

Once all the configuration and music files are present in the remote servers, it's time to activate the Exstreamer Store&Play devices to start playing content. There are several ways to activate the player devices so that they can start running autonomously.

It is strongly recommended to use the internal microSD card as the storage media. The File System in which the internal microSD is formatted (EXT4) has proven to be the most reliable and robust in front of unexpected power losses. On the other hand, since the microSD is an internal component of the Exstreamer Store&Play device, it also prevents undesired physical detachment of the storage media.

3.4.1 Using external USB memory stick

a) Copy all files to USB stick
If the user wants to use an external USB stick as the storage media for the Store&Play application, the fastest way to activate the player device is plugging in a USB stick that already contains all the configuration (CFG) and audio (M3U, MP3) files. With this method, the Store&Play device will start playing immediately according to the configuration in player.cfg.

b) Copy player.cfg to USB stick
If the user wants to use an external USB stick as the storage media for the Store&Play application, the simplest way to activate the player device is attaching a USB stick that already contains the configuration (player.cfg) file. With this method, the Store&Play device will automatically fetch the new player.cfg from the CONFIG_SERVER and start downloading all the Playlists and related media files. Since the device will first have to download all the media content, the time to play the first song will depend on the network downloading speed and the settings of player.cfg, for example if QUICK_PLAY is enabled and if UPDATE_DAILY_TIME is set.

c) Download all files to USB stick
If the user wants to use an empty USB stick as storage media without having to copy any file to it manually, he can use the Fallback Configuration server settings (from the SETTINGS tab of the web UI) to point to the server containing the player.cfg. With this method, as soon as the user attaches an empty USB to the Exstreamer Store&Play, it will automatically download first the player.cfg using the credentials set in the Fallback Configuration server and then all the corresponding media files. The time to play the first song will depend on the network downloading speed and settings of player.cfg.

3.4.2 Using internal microSD card

a) Download all files to internal microSD

If the user wants to use the internal microSD card as the storage media without the need of using a USB memory stick at all, he will need to configure the device to download all necessary files to the microSD. In order to do this, the user can follow these steps:

1. Edit FALLBACK CONFIG SERVER SETTINGS from SETTINGS tab in the web UI of the unit to match the credentials of the CONFIG_SERVER where player.cfg is located.
2. Select "**microSD**" in "**Storage Media**" under APPLICATION SETTINGS in SETTINGS tab of the web UI of the unit.
3. If the microSD card was not empty (e.g. it already had a player.cfg) the user might need to click on "**Force fallback config server settings**" from the "DEFAULTS" tab of the web UI. An alternative is to "**Format**" the microSD card from the web UI's "DEFAULTS" tab.

Note that this last method can be done remotely without any physical access to the unit (although user needs network access to the web UI of the unit).

b) Copy all files from USB to internal microSD

If the user wants to use the internal microSD card and a "master" USB that already contains the necessary configuration and all media files, he can use the "Copy USB to microSD" function available in the SETTINGS tab of the web UI. In order to do this, the user can follow these steps:

1. Insert "master" USB with player.cfg and (optionally) media files (M3U and MP3).
2. Select "**USB**" and corresponding "**Player Directory**" and Click on "**Copy to microSD**" next to the "Storage Media" selection under APPLICATION SETTINGS in the SETTINGS tab of the web UI.

Using this method, the device will check that there is enough space in the microSD card to copy all files present in the "Player Directory" of the USB stick and copy them in the same folder created in the microSD. Once the copying has finished successfully, it will automatically select "microSD" as "Storage Media" and eject the USB to be able to remove it safely.

Note that using this method will erase all previous content existing in the internal microSD and it can take a long time to copy all the files from the USB to the microSD.

Activation of the device Tips and Tricks

1) If the USB stick is not formatted (or not present) and the "Storage Media" selected is "USB", the Store&Play application will send a warning message and will quit.

2) If the configuration file (player.cfg) is not found in the selected "Storage Media", the Store&Play application will automatically fetch the player.cfg file from the CONFIG_SERVER defined in FALLBACK CONFIG SERVER SETTINGS in the SETTINGS tab of the web UI. If for whatever reason the Fallback configuration server is not reachable, the device will use the last player.cfg that was used, which is stored on the internal NAND memory of the device.

3.5 Device monitoring

Once the Store&Play is fully configured and operating, the user can monitor the status of its operation via several means:

1) HOME, STATUS and LOG tabs of the web UI
2) BariMon server
3) SYSLOG messages

In general, accessing the web UI of the Exstreamer Store&Play will give the user enough information to monitor the correct operation of the device. The different tabs of the web UI provide real time information about the current Playlist and Track being played, the Volume at which it is playing, the Playlists that are configured in the device, the current player.cfg configuration file being used, the files present in the local storage media (and the missing ones), the types of storage media being used, the File System format and usage percentage of the storage media and many other useful indicators to assess the status and the proper operation of the system.

However, it might be useful for some users to be able to have historical records and document the played audio files, for instance to generate played track reports for royalty fees or to validate Service Level Agreements –SLAs- with Advertisers. In these situations an external service such as BariMon can be very useful.

Finally, mainly for troubleshooting purposes, some users might want to be able to access the SYSLOG messages of the device, obtaining detailed information of the different methods being used by the Store&Play application. This information is also very useful for BARIX's support team in order to help detecting and identifying problems and providing faster fixes and corrections to potential issues.

We will leave the explanation of the monitoring using the web UI for Chapter 4 and in this Chapter we will focus on the BariMon and SYSLOG monitoring methods.

3.5.1 BariMon monitoring

BariMon is a service provided by BARIX that is able to collect messages sent from Exstreamer Store&Play devices and display them in a web portal interface. The report messages sent to the BariMon server are done every time there is a new track played and periodically every BARIMON_INTERVAL (as defined in player.cfg). The information that is sent by the device in the form of a BariMon notification message to the BariMon server contains the following fields:

1. Timestamp of the entry “Put date”
2. Name of the active playlist
3. Name of the played audio file
4. Playback Volume
5. Number of MUSIC_UPDATES since start
6. System uptime in seconds
7. Total number of files available
8. Total file size of all files (in Bytes)
9. Number of missing (not downloaded) Playlists
10. Number of missing (not downloaded) audio files

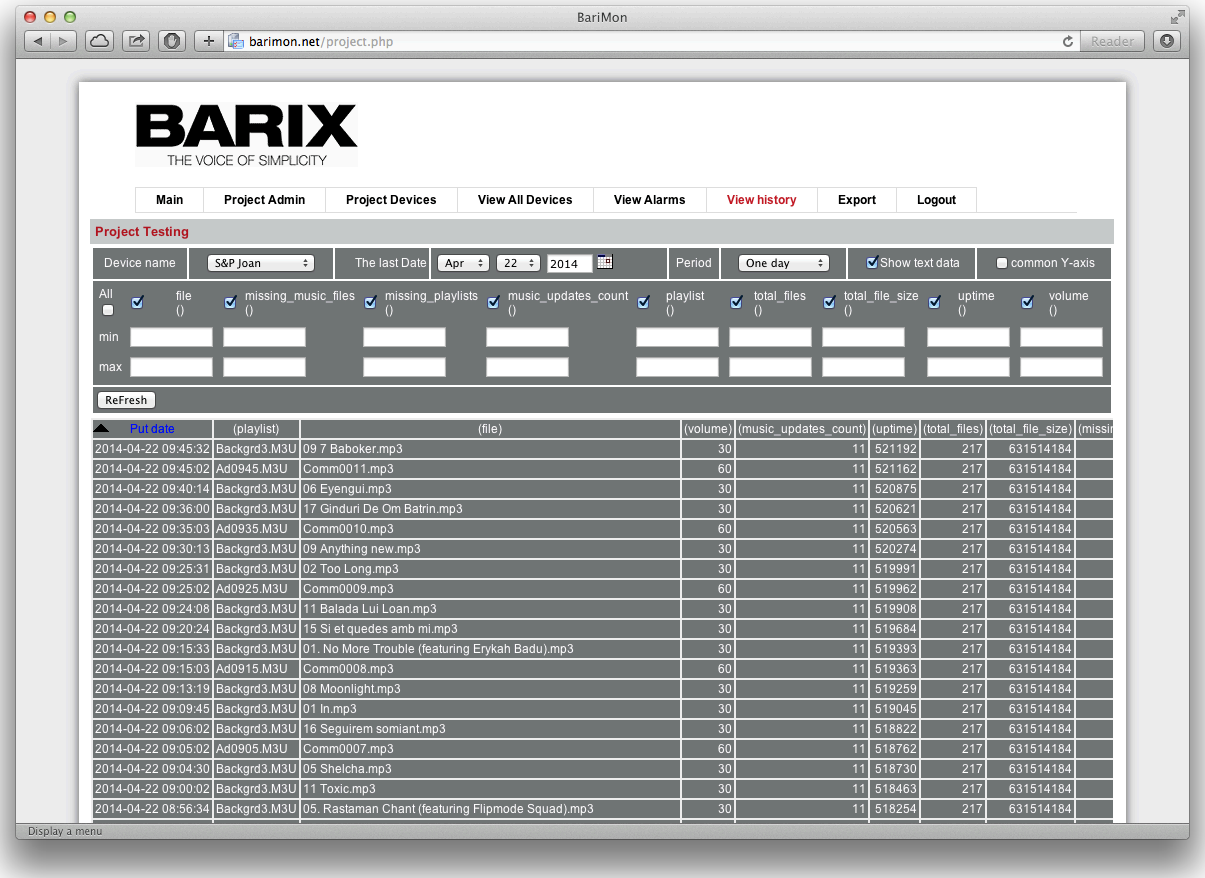

BariMon monitoring Tips and Tricks

1) The total number of files and the total file size as well as the number of missing music playlists and music files will be calculated only after the first completed (either successfully or with errors) download operation. Before that they may show zero value.

2) BariMon can send email alarm messages to the user's email account after a pre-defined "Device Timeout" so if BariMon doesn't receive any message from the device after this time it will warn the user via email.

3) Since BariMon notifications are sent at every BARIMON_INTERVAL and every time a new audio file starts to play, the report will show double entries (reporting the same track name with a different timestamp) at every BARIMON_INTERVAL. Please note that this does not mean the track was played twice.

4) The total file size might not be correctly displayed on the BariMon report if it exceeds 4GB.

5) For more information on BARIMON please visit www.barimon.net

3.5.2 SYSLOG monitoring

The user can access the SYSLOG messages of the Store&Play devices. The information on the SYSLOG messages is extensive and can be used for advanced troubleshooting purposes.

SYSLOG messages are not broadcasted to the network and the user has to specify a target IP address where the collection software (e.g., network sniffer) will be located. This is done from the SETTINGS tab of the web UI of the Exstreamer Store&Play under the NETWORK SETTINGS in the “Syslog Address” field.

The user can increase the verbosity of the SYSLOG messages to provide even more exhaustive information about the operations of the device from the SETTINGS tab of the web UI under the APPLICATIONS SETTINGS enabling the “Debugging Output”.

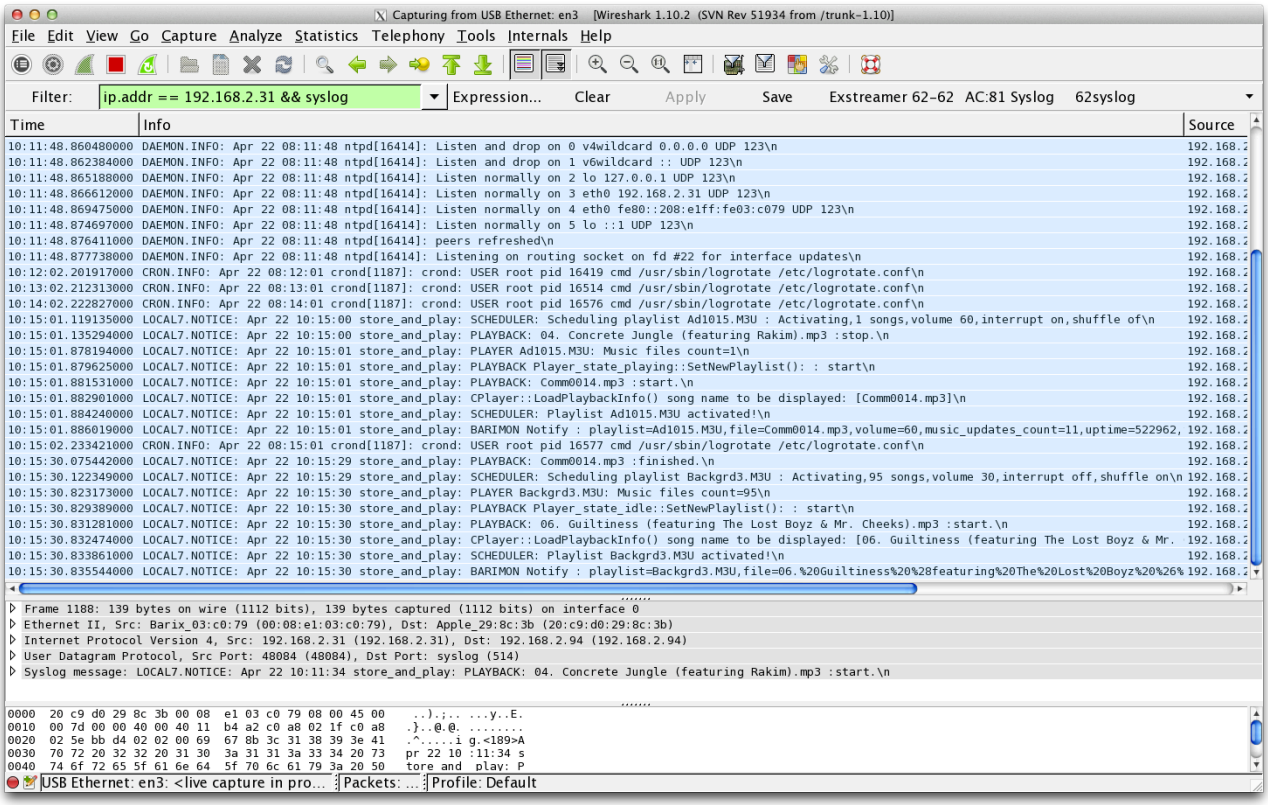
Capturing from USB Ethernet: en3 [Wireshark 1.10.2 (SVN Rev 51934 from /trunk-1.10)]
File Edit View Go Capture Analyze Statistics Telephony Tools Internals Help
Filter: ip.addr == 192.168.2.31 && syslog
Expression... Clear Apply Save Exstreamer 62-62 AC:81 Syslog 62syslog
Time Info Source
10:11:48.860480000 DAEMON.INFO: Apr 22 08:11:48 ntpd[16414]: Listen and drop on 0 v4wildcard 0.0.0.0 UDP 123\n
10:11:48.862384000 DAEMON.INFO: Apr 22 08:11:48 ntpd[16414]: Listen and drop on 1 v6wildcard :: UDP 123\n
10:11:48.865188000 DAEMON.INFO: Apr 22 08:11:48 ntpd[16414]: Listen normally on 2 lo 127.0.0.1 UDP 123\n
10:11:48.866612000 DAEMON.INFO: Apr 22 08:11:48 ntpd[16414]: Listen normally on 3 eth0 192.168.2.31 UDP 123\n
10:11:48.869475000 DAEMON.INFO: Apr 22 08:11:48 ntpd[16414]: Listen normally on 4 eth0 fe80::208:e1ff:fe03:c079 UDP 123\n
10:11:48.874697000 DAEMON.INFO: Apr 22 08:11:48 ntpd[16414]: Listen normally on 5 lo ::1 UDP 123\n
10:11:48.876411000 DAEMON.INFO: Apr 22 08:11:48 ntpd[16414]: peers refreshed\n
10:11:48.877738000 DAEMON.INFO: Apr 22 08:11:48 ntpd[16414]: Listening on routing socket on fd #22 for interface updates\n
10:12:02.201917000 CRON.INFO: Apr 22 08:12:01 crond[1187]: crond: USER root pid 16419 cmd /usr/sbin/logrotate /etc/logrotate.conf\n
10:13:02.212313000 CRON.INFO: Apr 22 08:13:01 crond[1187]: crond: USER root pid 16514 cmd /usr/sbin/logrotate /etc/logrotate.conf\n
10:14:02.222827000 CRON.INFO: Apr 22 08:14:01 crond[1187]: crond: USER root pid 16576 cmd /usr/sbin/logrotate /etc/logrotate.conf\n
10:15:01.119135000 LOCAL7.NOTICE: Apr 22 10:15:00 store_and_play: SCHEDULER: Scheduling playlist Ad1015.M3U : Activating,1 songs,volume 60,interrupt on,shuffle of\n
10:15:01.135294000 LOCAL7.NOTICE: Apr 22 10:15:00 store_and_play: PLAYBACK: 04. Concrete Jungle (featuring Rakim).mp3 :stop.\n
10:15:01.878194000 LOCAL7.NOTICE: Apr 22 10:15:01 store_and_play: PLAYER Ad1015.M3U: Music files count=1\n
10:15:01.879625000 LOCAL7.NOTICE: Apr 22 10:15:01 store_and_play: PLAYBACK Player_state_playing::SetNewPlaylist(): : start\n
10:15:01.881531000 LOCAL7.NOTICE: Apr 22 10:15:01 store_and_play: PLAYBACK: Comm0014.mp3 :start.\n
10:15:01.882901000 LOCAL7.NOTICE: Apr 22 10:15:01 store_and_play: CPlayer::LoadPlaybackInfo() song name to be displayed: [Comm0014.mp3]\n
10:15:01.884240000 LOCAL7.NOTICE: Apr 22 10:15:01 store_and_play: SCHEDULER: Playlist Ad1015.M3U activated!\n
10:15:01.886019000 LOCAL7.NOTICE: Apr 22 10:15:01 store_and_play: BARIMON Notify : playlist=Ad1015.M3U,file=Comm0014.mp3,volume=60,music_updates_count=11,uptime=522962,
10:15:02.233421000 CRON.INFO: Apr 22 08:15:01 crond[1187]: crond: USER root pid 16577 cmd /usr/sbin/logrotate /etc/logrotate.conf\n
10:15:30.075442000 LOCAL7.NOTICE: Apr 22 10:15:29 store_and_play: PLAYBACK: Comm0014.mp3 :finished.\n
10:15:30.122349000 LOCAL7.NOTICE: Apr 22 10:15:29 store_and_play: SCHEDULER: Scheduling playlist Backgrd3.M3U : Activating,95 songs,volume 30,interrupt off,shuffle on\n
10:15:30.823173000 LOCAL7.NOTICE: Apr 22 10:15:30 store_and_play: PLAYER Backgrd3.M3U: Music files count=95\n
10:15:30.829389000 LOCAL7.NOTICE: Apr 22 10:15:30 store_and_play: PLAYBACK Player_state_idle::SetNewPlaylist(): : start\n
10:15:30.831281000 LOCAL7.NOTICE: Apr 22 10:15:30 store_and_play: PLAYBACK: 06. Guiltiness (featuring The Lost Boyz & Mr. Cheeks).mp3 :start.\n
10:15:30.832474000 LOCAL7.NOTICE: Apr 22 10:15:30 store_and_play: CPlayer::LoadPlaybackInfo() song name to be displayed: [06. Guiltiness (featuring The Lost Boyz & Mr.
10:15:30.833861000 LOCAL7.NOTICE: Apr 22 10:15:30 store_and_play: SCHEDULER: Playlist Backgrd3.M3U activated!\n
10:15:30.835544000 LOCAL7.NOTICE: Apr 22 10:15:30 store_and_play: BARIMON Notify : playlist=Backgrd3.M3U,file=06.%20Guiltiness%20%28featuring%20The%20Lost%20Boyz%20%26%
Frame 1188: 139 bytes on wire (1112 bits), 139 bytes captured (1112 bits) on interface 0
Ethernet II, Src: Barix_03:c0:79 (00:08:e1:03:c0:79), Dst: Apple_29:8c:3b (20:c9:d0:29:8c:3b)
Internet Protocol Version 4, Src: 192.168.2.31 (192.168.2.31), Dst: 192.168.2.94 (192.168.2.94)
User Datagram Protocol, Src Port: 48084 (48084), Dst Port: syslog (514)
Syslog message: LOCAL7.NOTICE: Apr 22 10:11:34 store_and_play: PLAYBACK: 04. Concrete Jungle (featuring Rakim).mp3 :start.\n
0000 20 c9 d0 29 8c 3b 00 08 e1 03 c0 79 08 00 45 00 ..).;.. ...y..E.
0010 00 7d 00 00 40 00 40 11 b4 a2 c0 a8 02 1f c0 a8 .}..@.@. ....
0020 02 5e bb d4 02 02 00 69 67 8b 3c 31 38 39 3e 41 .^.....i g.<189>A
0030 70 72 20 32 32 20 31 30 3a 31 31 3a 33 34 20 73 pr 22 10 :11:34 s
0040 74 6f 72 65 5f 61 6e 64 5f 70 6c 61 79 3a 20 50 tore_and_play: P
USB Ethernet: en3: <live capture in pro... Packets: ... Profile: Default

3.6 Updating Playlists and Configuration

After the initial setup and configuration of the Store&Play system, the user or Service Provider might need to change the Playlists and the Configuration of the device to add new content, remove outdated or undesired content and insert some new local advertisements or announcements.

The user must bear in mind that the Configuration and Playlists reside in the remote servers and that the Exstreamer Store&Play devices will only update their content after a successful MUSIC_UPDATE or CONFIG_UPDATE which only happens at regular intervals (typically at night as defined in UPDATE_DAILY_TIME).

3.6.1 Updating Playlists

The easiest way to update the content is to edit the M3U Playlists that are already being used without changing the Playlist name (as defined in the current player.cfg) removing the outdated content and adding the new content. For instance, if a Song is no longer desired it can be removed from the M3U Playlist and be replaced by the latest Song from the hit parade. This is also valid in case that inserted Ads and Announcements are part of the same Playlists.

The user will have to upload the new edited Playlist with the same name to the MUSIC_SERVER and wait until the Exstreamer Store&Play connects for a Music update.

Note that the user can also force the Music update without having to wait until the scheduled MUSIC_UPDATE by pressing the “Force config update” button from the STATUS tab of the web UI (see Chapter 4.4 for more details).

The next time the Exstreamer Store&Play connects to the Content Server (MUSIC_SERVER) it will download and parse the edited Playlist and will detect that some Tracks have been removed and new ones have been added, so it will automatically download the new Tracks and delete the ones that are no longer needed. After this successful Music update operation, the Exstreamer Store&Play will be able to play the Tracks according to the new Playlist.

3.6.2 Ad Insertion Playlists

In case the Inserted Ads and Announcements are configured in separate Playlists, the Service Provider will need to define not only the new Playlists with the right content and settings (e.g., appropriate START_TIME, END_TIME and INTERRUPT flag) but also make sure they are listed in the configuration file (player.cfg) in the PLAYLIST section with the right Priority (order in the list) in the Configuration Server. This is also valid in case the user wants to define any new Playlist with a new name.

Therefore the user will have to upload not only the new Playlist to the MUSIC_SERVER but also the new player.cfg to the CONFIG_SERVER and wait until the Exstreamer Store&Play connects for a Configuration Update.

Note that the user can also force the Configuration Update without having to wait until the scheduled CONFIG_UPDATE by pressing the “Force config update” button from the STATUS tab of the web UI (see Chapter 4.4 for more details).

The next time the Exstreamer Store&Play connects to the Configuration Server (CONFIG_SERVER) it will download the new player.cfg and will detect that there is a new Playlist defined, it will then download the new Playlist (along with all other Playlists defined in player.cfg) and will parse the Playlists to determine which new Tracks have to be downloaded from the MUSIC_SERVER. In parallel, if the new player.cfg doesn’t contain a Playlist any longer, the device will delete all the audio files that are not needed any longer (those that were mentioned in the Playlists that was removed and were only mentioned in that Playlist).

3.6.3 Localized Content

Another typical scenario is when the user or Service Provider needs to configure multiple Exstreamer Store&Play in different groups of configurations. In this case, the user will have to setup different configuration files, each of them containing the appropriate Playlists for each of the groups.

As a clarification example, let's assume that a customer in Switzerland would like to have 3 different configurations addressing 3 different language groups within the country, in a way that the Advertisements and Announcements are played in German, French and Italian language at each corresponding region. The Background music is going to be the same so only the Announcements and Advertisements will change from region to region.

In this case, the user has to configure 3 different player.cfg's that will reside in 3 different CONFIG_SERVERs (or different CONFIG_DIR in the same CONFIG_SERVER). Since the Background music will be the same, the 3 player.cfg's will all be pointing to the same MUSIC_SERVER that will be the common audio file pool also containing all the Playlists and Advertisements and Announcements in all the languages.

The 3 player.cfg's for the German (DE), French (FR) and Italian (IT) Exstreamers Store&Play could look something like this:

… CONFIG_DIR=config/DE … PLAYLIST=Ann_DE.M3U PLAYLIST=Ad_DE.M3U PLAYLIST=Background.M3U …	… CONFIG_DIR=config/FR … PLAYLIST=Ann_FR.M3U PLAYLIST=Ad_FR.M3U PLAYLIST=Background.M3U …	… CONFIG_DIR=config/IT … PLAYLIST=Ann_IT.M3U PLAYLIST=Ad_IT.M3U PLAYLIST=Background.M3U …

Therefore the only differences will be the location where each of the configuration files will be stored and the specific Playlists that each of them will be playing accordingly.

Once the player.cfg's have been uploaded to the corresponding locations, the different Exstreamers Store&Play need to be pointed to the corresponding configurations accordingly. In order to do that, the easiest way is using the "Fallback Config Server Settings" from the SETTINGS tab of the web UI (see more details in Chapter 4.2.2). These settings define the server from where the device will fetch the player.cfg file in case there is no player.cfg in the local storage media but it can also be used to force the Exstreamer Store&Play to fetch the player.cfg using these credentials.

In the example above, the user would connect to the web UI of an Exstreamer Store&Play located in Zurich (German speaking) and would point the device to the config/DE in "Config Server Directory" in the "Fallback Config Server Settings" from the SETTINGS tab of the web UI and would press the "Submit" button to save the change. The user would then have force the device to use that player.cfg by pressing the "Force Fallback Config Server Settings" button located in the DEFAULTS tab to make the change effective.

Likewise, the user would connect to the web UI of an Exstreamer Store&Play located in Geneva (French speaking) and would point the device to the config/FR in "Config Server Directory" in the "Fallback Config Server Settings" from the SETTINGS tab of the web UI and would press the "Submit" button to save the change. After this, the user would then have force the device to use that player.cfg by pressing the "Force Fallback Config Server Settings" button located in the DEFAULTS tab.

Finally, the user would connect to a device in Lugano (Italian speaking) and point it to the config/IT Server Directory of the “Fallback Config Server Settings”, save this pressing “Submit” and force the device to fetch the corresponding player.cfg pressing “Force Fallback Config Server Settings”.

After all the Exstreamer Store&Play devices have been forced to fetch the corresponding player.cfg’s to their locations, the system will work autonomously and each of the devices will fetch the new configurations and Playlists according to their language group the next time they connect to the CONFIG_SERVER and MUSIC_SERVER respectively.

From that moment onwards, all the content updates and ad insertions would be managed separately for each of the language groups as explained in the previous chapters 3.6.1 Updating Playlists and 3.6.2 Ad Insertion Playlists.

This is an example of how the “Fallback Config Server Settings” in the SETTINGS tab of the web UI would look like in all Exstreamer Store&Play devices located in the German speaking part of Switzerland:

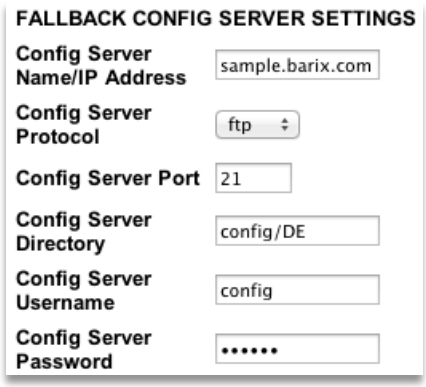

4 Web User Interface (Web UI)

The web UI of the Exstreamer Store&Play can be used for adjusting the settings of the device and for monitoring purposes.

In order to access the web UI of the device, the user will need to know the IP address of the device (see “Quick Install Guide”) and use a standard web browser running in the same network as the Exstreamer Store&Play.

Typing the known IP address in the URL address field of the browser will show the HOME tab of the Exstreamer Store&Play.

The top line of the Exstreamer Store&Play web UI shows multiple tabs that give access to specific functions and settings of the application. On the top right corner of the web UI (red colored) the user will be able to identify the hardware of the device with the MAC address as well as the installed firmware version of the Store&Play application.

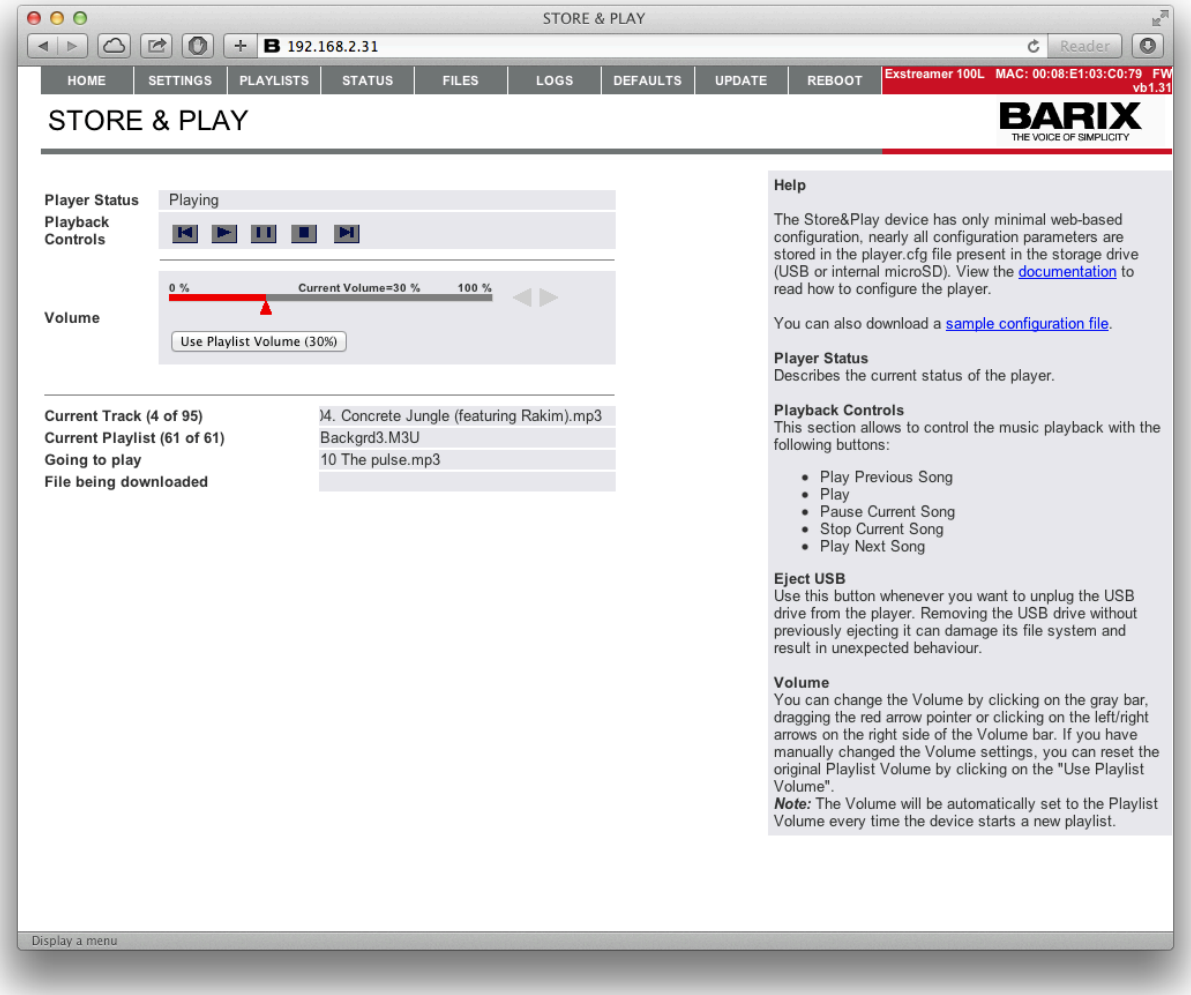
STORE & PLAY
192.168.2.31
Reader
HOME
SETTINGS
PLAYLISTS
STATUS
FILES
LOGS
DEFAULTS
UPDATE
REBOOT
Exstreamer 100L MAC: 00:08:E1:03:C0:79 FW vb1.31
STORE & PLAY
BARIX
THE VOICE OF SIMPLICITY
Player Status
Playing
Playback Controls
Volume
0 %
Current Volume=30 %
100 %
Use Playlist Volume (30%)
Current Track (4 of 95)
4. Concrete Jungle (featuring Rakim).mp3
Current Playlist (61 of 61)
Backgrd3.M3U
Going to play
10 The pulse.mp3
File being downloaded
Help
The Store&Play device has only minimal web-based configuration, nearly all configuration parameters are stored in the player.cfg file present in the storage drive (USB or internal microSD). View the documentation to read how to configure the player.
You can also download a sample configuration file.
Player Status
Describes the current status of the player.
Playback Controls
This section allows to control the music playback with the following buttons:
Play Previous Song
Play
Pause Current Song
Stop Current Song
Play Next Song
Eject USB
Use this button whenever you want to unplug the USB drive from the player. Removing the USB drive without previously ejecting it can damage its file system and result in unexpected behaviour.
Volume
You can change the Volume by clicking on the gray bar, dragging the red arrow pointer or clicking on the left/right arrows on the right side of the Volume bar. If you have manually changed the Volume settings, you can reset the original Playlist Volume by clicking on the "Use Playlist Volume".
Note: The Volume will be automatically set to the Playlist Volume every time the device starts a new playlist.
Display a menu

4.1 HOME tab

The HOME tab of the Exstreamer Store&Play is the landing page of the device and provides basic control of the player and information about the current status of the application. On the left hand side of the page, the user will be able to read the following information:

"**Player Status**" can be Playing, Stopped or Idle.

"**Playback Controls**" allow the user to play the previous audio track in the current playlist, play, pause and stop the playback or skip the current track and play the next track in the active playlist.

Whenever the Exstreamer Store&Play is playing from a USB memory stick (default behavior) an "**Eject USB**" button will appear in the "Playback Controls" line. This button is used to be able to remove safely the flash drive from the device. It is recommended to use always this button before removing the USB from the device in order to avoid file system corruption and unexpected behavior of the application next time this flash drive is used.

If the "Eject USB" button is shown in yellow or red background color, it means that the device has detected a read-only or a corrupt File System:



"**Volume**" shows the Current Volume set in the device. The user can change the playback Volume by moving the red triangle slider, clicking on the slider itself or in left/right triangular arrows at the right of the Volume slider indicator. The user can reset the Playlist Volume with the "Use Playlist Volume" button.

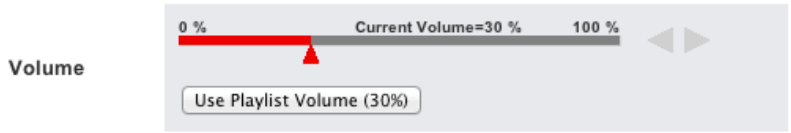

Note: The Volume will be automatically reset to the Playlist Volume (defined in the BARIX configuration line of the M3U playlist) every time a new Playlist is loaded.

The lower part of the left frame of the HOME tab displays information about the Tracks and Playlists that are currently active:

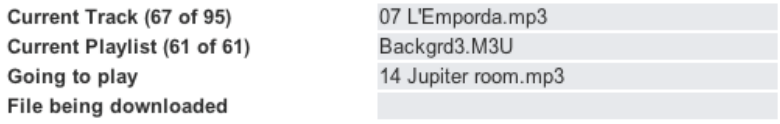

"**Current Track**" displays the name of the MP3 file being played. It also shows the number of the track within the Playlist.

"**Current Playlist**" shows the name of the active BARIX M3U Playlist and the priority of the Playlist among all the Playlists that are configured in the Store&Play application.

"**Going to play**" informs about the name of the next audio track scheduled to be played in the active Playlist.

"**File being downloaded**" will show the name of the file currently being downloaded by the Store&Play application (if any).

The right hand side "**Help**" frame gives basic information about the HOME page and it also provides a couple of links to a quick reference configuration manual *documentation* and to a *sample configuration file* (player.cfg).

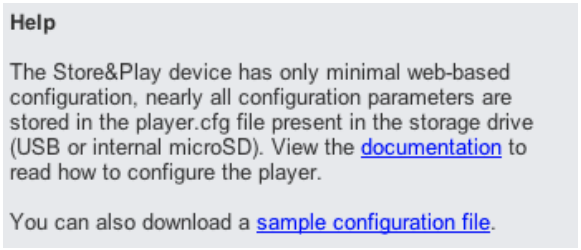
Help
The Store&Play device has only minimal web-based configuration, nearly all configuration parameters are stored in the player.cfg file present in the storage drive (USB or internal microSD). View the documentation to read how to configure the player.
You can also download a sample configuration file.

4.2 SETTINGS tab

The SETTINGS tab of the Exstreamer Store&Play is the place where most of the system and application configuration is done.

Any change in the SETTINGS tab has to be confirmed with the "**Submit**" button at the bottom of the page for the changes to make effect.

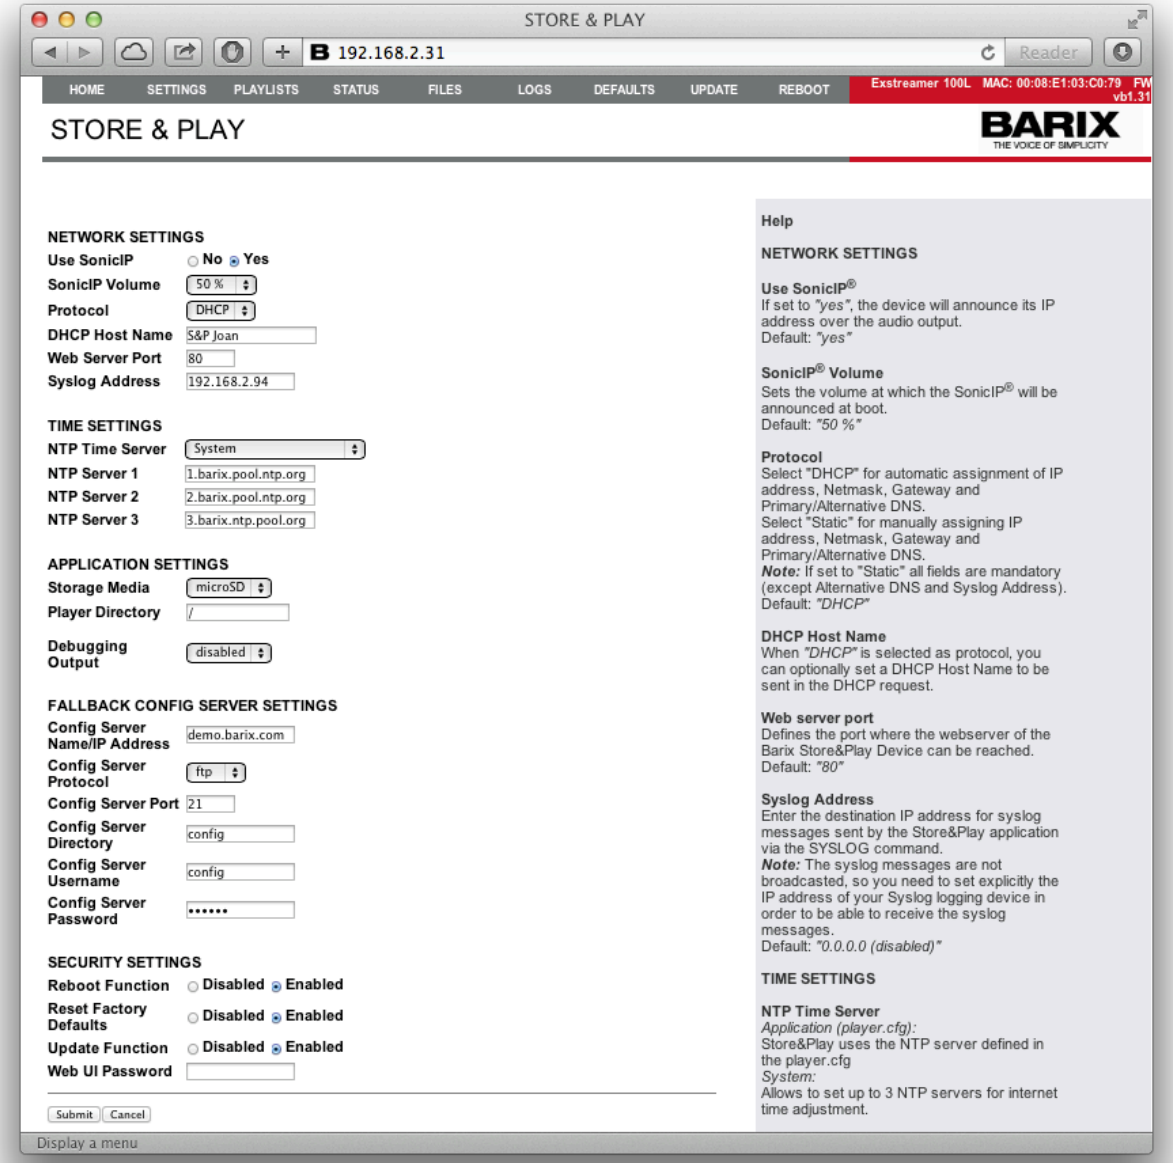

The **Help** section on the right frame of the SETTINGS tab can be used as a quick reference for all the fields and options available in this page.

There are different categories of settings that can be modified and these are summarized in the following sub-chapters.

4.2.1 NETWORK SETTINGS

The NETWORK SETTINGS section of the Exstreamer Store&Play SETTINGS tab allows the user to makes changes regarding the network configuration of the device.

"**Use SonicIP**" enables and disables the automatic announcement of the IP address used by the device over the audio outputs (headphone jack and RCA outputs) at start-up of the application. This feature is very useful when the user doesn't know which IP address has been assigned to the device. The "**SonicIP Volume**" defines the Volume at which the IP address announcement will be made.

Users can disable this feature when the device's network configuration is complete and the assigned IP address is known in order to avoid the IP announcement over the audio outputs after every reboot when the device is deployed at the end users facilities. Disabling this feature also allows the device to complete the boot-up process faster and achieve a shorter time to play (from boot-up until the first audio track is played).

Note: In case the user is connected to the device remotely or cannot hear the SonicIP announcement, it is also possible to find out the IP address of the BARIX devices in the network by using the "Discovery Tool" software available from www.barix.com/downloads/

"**Protocol**" defines the method used by the device to set its IP address. There are 2 possible methods in the Exstreamer Store&Play: **DHCP** and **Static** IP.

DHCP will use the DHCP server from the network to automatically acquire an available IP address in the network and configure all other network settings (Netmask, Gateway and Primary/Alternative DNS servers). This option allows the user to set a **DHCP Host Name** to easily identify the device in the network.



DHCP is the default method used in Exstreamer Store&Play devices and it assumes that there is a reachable DHCP server in the network to which it is connected. DHCP method is useful for its network auto-discovery capabilities and for the initial setup of the device but it is recommended to set a Static IP address when the devices are deployed in the field in order to avoid acquiring different IP addresses after each boot-up.

Choosing **Static** in the "**Protocol**" field allows the user to manually set an IP address, Netmask, Gateway and Primary/Alternative DNS addresses:

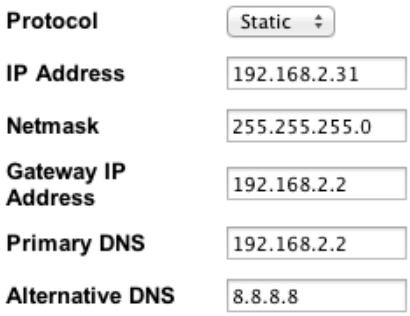

The user must make sure that there is no other device in the network using the same IP address in order to avoid IP address conflicts that would render the device unusable for network operations.

Note that when using Static IP address all the fields are mandatory (except Alternative DNS).

Web Server Port is used to define at which port is the Web UI of the Exstreamer Store&Play device reachable. By default this is set to 80 (HTTP default port) but this can be changed in order to bypass firewalls that instead allow traffic in other ports.

Syslog Address is an optional setting that is used to define the target IP address of the Syslog messages sent by the Exstreamer Store&Play. This is where the user can set the IP address of the device running the packet analyzer (network sniffer) in order to capture the traffic sent from the Exstreamer Store&Play collecting all the Syslog messages that are so useful for troubleshooting purposes.

Note: If the Syslog Address field is empty the Syslog messages are not broadcasted.

4.2.2 TIME SETTINGS

The TIME SETTINGS are used to define the NTP server that the Exstreamer Store&Play should be using to get the time reference from the network.

By default, the "**NTP Time Server**" will be set to "**Application (player.cfg)**":

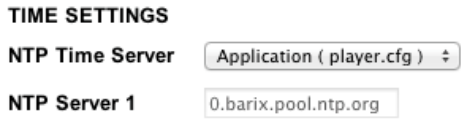

With this setting, the Exstreamer Store&Play will try to connect to the NTP defined in the NTP_SERVER line of the player.cfg. In this situation "NTP Server 1" will display the NTP server that is being used as defined in the current player.cfg. Note that this line will be grayed out so it's not possible to edit the NTP server name.

However, it is possible to set the "**NTP Time Server**" to "**System**", in which case the user is allowed to manually set up to 3 different NTP Servers that the Exstreamer Store&Play will use, ignoring the setting defined in the NTP_SERVER line of player.cfg.

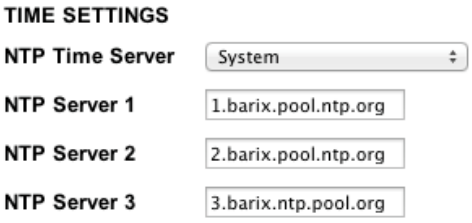

4.2.3 APPLICATION SETTINGS

These settings are used to define which “**Storage Media**“ is the Exstreamer Store&Play application going to use for downloading and playback of audio files.

By default, the Exstreamer Store&Play will use the external USB and the root directory as “**Player Directory**” so at start-up from factory defaults the device expects to find a USB memory stick (optionally with a valid player.cfg and media files in the root directory) attached to the EXT. port in the front plate of the device.

Whenever “**USB**” is selected, a “**Copy to microSD**” button will appear that can be used to copy all the content of the Player Directory of the USB into the internal microSD. This can be used to initialize the device to use the internal microSD as explained in the previous Chapter 3.4.2.

The “**Player Directory**” defines the directory in which the Exstreamer Store&Play expects to find the player.cfg and all the rest of necessary files for its operation such as M3U Playlists and MP3 media files.

As already explained in previous Chapters of this Manual, it is strongly recommended to use the internal “**microSD**” for increased robustness and security of the system. In order to force the device to use the internal microSD, the user has to select “**microSD**” from the drop-down menu of the “**Storage Media**” line:

Note that if “**Copy to microSD**” function was used, the Exstreamer Store&Play will automatically change the Storage Media to “microSD” without any manual intervention after a successful copy of all the files present in the USB Player Directory.

4.2.4 FALLBACK CONFIG SERVER SETTINGS

These settings define the credentials of the Fallback configuration server that the Exstreamer Store&Play will use in two different scenarios:

1) When the device doesn't find a valid player.cfg in the selected **Storage Media** and **Player Directory**.

2) When the user forces the device to fetch the player.cfg from this server by pressing "**Force Fallback Config Server Settings**" button in the DEFAULTS tab.

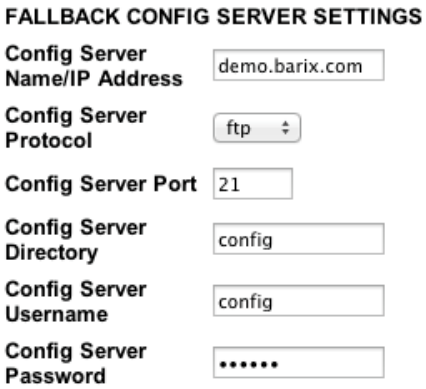

According to the Factory Defaults, the Fallback Config Server Settings will point to the configuration containing the BARIX demo content, announcing a Welcome message, the time of the year (first half or second half of the year), the time of the day (morning or afternoon) and repeating the weekday in which it is playing (Monday, Tuesday, Wednesday, Friday, Saturday or Sunday). It is strongly recommended to change these settings to the appropriate CONFIG_SERVER to which the Exstreamer Store&Play should be configured.

4.2.5 SECURITY SETTINGS

These settings are used to protect the Exstreamer Store&Play from undesired manipulation and configuration changes by enabling or disabling some features and functionalities.

By default, all the functions are enabled and unprotected but the user has the possibility to Disable or protect the following functions:

Reboot Function: Disables the Reboot button from the REBOOT tab of the web UI and also disables the hardware Reboot (short press of the RESET button in the front plate of the device).

Reset Factory Defaults: Disables the possibility to reset all settings to factory defaults from both the “Reset Factory Defaults” button in the DEFAULTS tab and the hardware Reset (long press of the RESET button in the front plate of the device).

Update Function: Disables the possibility to perform an application or system update from the UPDATE tab of the web UI.

Web UI Password: Sets a protection password to access the web UI of the Exstreamer Store&Play. When set, a user trying to access the web UI of the device will be asked for a username (“admin”) and a password, without which he will not be able to access the web UI. If a Password is set, the user can change the Password by typing the **Old Password** and the **New Password** (leave blank to disable the web UI Password protection).

4.3 PLAYLISTS tab

This tab shows a list of all the Playlists that are configured in the current player.cfg of the Exstreamer Store&Play. It displays the following information for each Playlist:

1. **Priority** of the Playlists in the same order in which they are listed in the player.cfg
2. **Name** of the M3U Playlist
3. **Songs** or number of audio files that are included in the Playlist
4. **Start Date** when the Playlist is active
5. **Stop Date** or End Date when the Playlist is not active any more
6. **Day of the Week** when the Playlist is active
7. **Start Time** when the Playlist is active
8. **Stop Time** or End Time when the Playlist is not active any more
9. **Remaining Repeats** or times that the Playlist can still play until the next Music update
10. **Volume** which is the Playlist Volume expressed in %
11. **Interrupt Flag**
12. **Shuffle Flag**

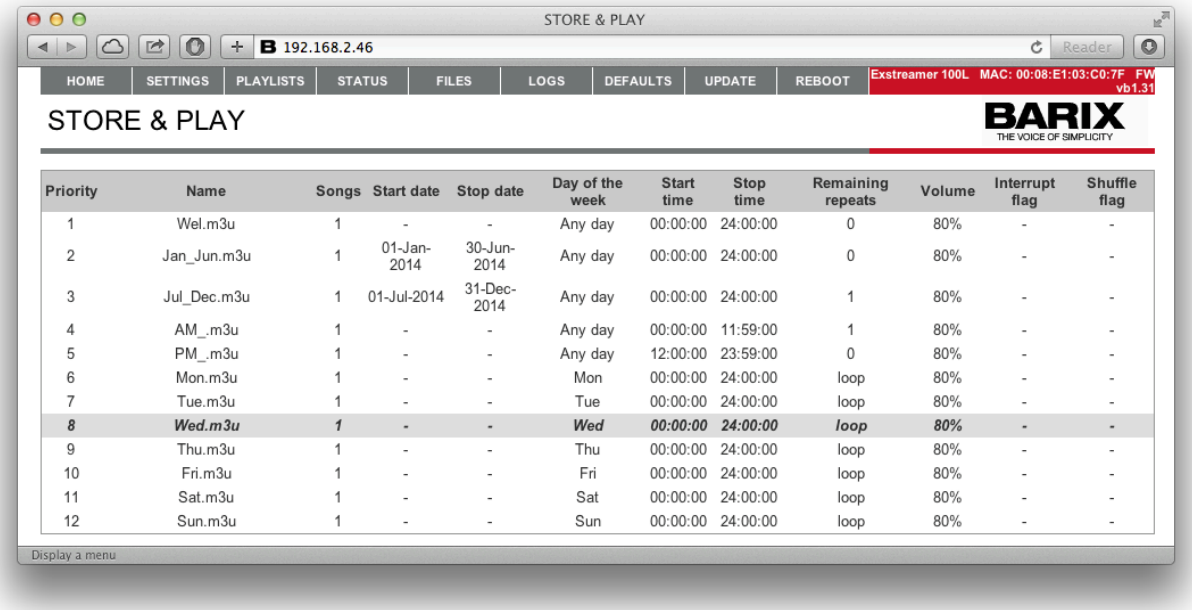

Priority	Name	Songs	Start date	Stop date	Day of the week	Start time	Stop time	Remaining repeats	Volume	Interrupt flag	Shuffle flag
1	Wel.m3u	1	-	-	Any day	00:00:00	24:00:00	0	80%	-	-
2	Jan_Jun.m3u	1	01-Jan-2014	30-Jun-2014	Any day	00:00:00	24:00:00	0	80%	-	-
3	Jul_Dec.m3u	1	01-Jul-2014	31-Dec-2014	Any day	00:00:00	24:00:00	1	80%	-	-
4	AM_.m3u	1	-	-	Any day	00:00:00	11:59:00	1	80%	-	-
5	PM_.m3u	1	-	-	Any day	12:00:00	23:59:00	0	80%	-	-
6	Mon.m3u	1	-	-	Mon	00:00:00	24:00:00	loop	80%	-	-
7	Tue.m3u	1	-	-	Tue	00:00:00	24:00:00	loop	80%	-	-
8	***Wed.m3u***	***1***	***-***	***-***	***Wed***	***00:00:00***	***24:00:00***	***loop***	***80%***	***-***	***-***
9	Thu.m3u	1	-	-	Thu	00:00:00	24:00:00	loop	80%	-	-
10	Fri.m3u	1	-	-	Fri	00:00:00	24:00:00	loop	80%	-	-
11	Sat.m3u	1	-	-	Sat	00:00:00	24:00:00	loop	80%	-	-
12	Sun.m3u	1	-	-	Sun	00:00:00	24:00:00	loop	80%	-	-

On top of this information, the PLAYLISTS tab will also highlight the current active Playlist with a gray background and a bold and italic text.

4.4 STATUS tab

The STATUS tab, as the name suggests, provides information about the current status of the device and the application.

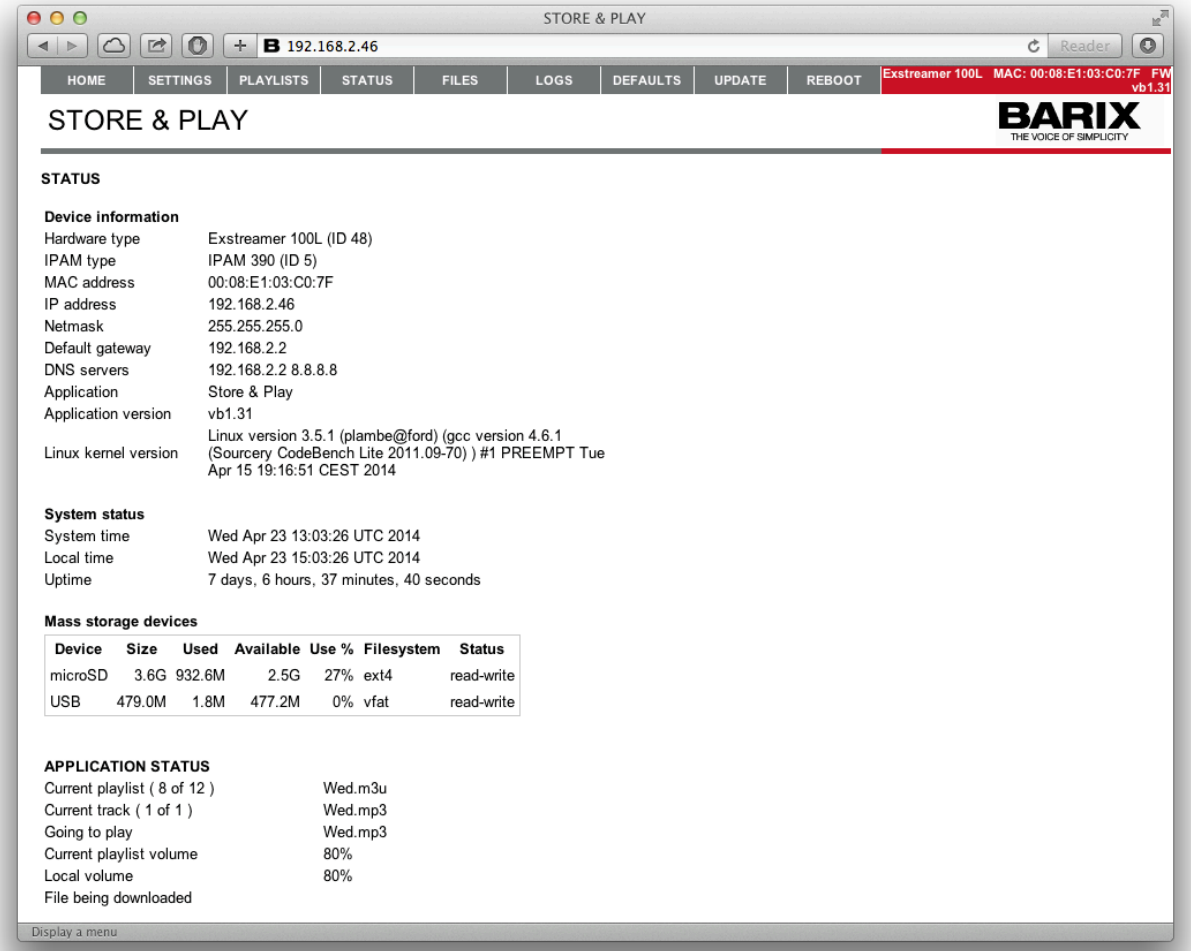
STORE & PLAY
192.168.2.46
Reader
HOME
SETTINGS
PLAYLISTS
STATUS
FILES
LOGS
DEFAULTS
UPDATE
REBOOT
Exstreamer 100L MAC: 00:08:E1:03:C0:7F FW vb1.31
STORE & PLAY
BARIX
THE VOICE OF SIMPLICITY
STATUS
Device information
Hardware type Exstreamer 100L (ID 48)
IPAM type IPAM 390 (ID 5)
MAC address 00:08:E1:03:C0:7F
IP address 192.168.2.46
Netmask 255.255.255.0
Default gateway 192.168.2.2
DNS servers 192.168.2.2 8.8.8.8
Application Store & Play
Application version vb1.31
Linux kernel version Linux version 3.5.1 (plambe@ford) (gcc version 4.6.1 (Sourcery CodeBench Lite 2011.09-70)) #1 PREEMPT Tue Apr 15 19:16:51 CEST 2014
System status
System time Wed Apr 23 13:03:26 UTC 2014
Local time Wed Apr 23 15:03:26 UTC 2014
Uptime 7 days, 6 hours, 37 minutes, 40 seconds
Mass storage devices
Device Size Used Available Use % Filesystem Status
microSD 3.6G 932.6M 2.5G 27% ext4 read-write
USB 479.0M 1.8M 477.2M 0% vfat read-write
APPLICATION STATUS
Current playlist (8 of 12) Wed.m3u
Current track (1 of 1) Wed.mp3
Going to play Wed.mp3
Current playlist volume 80%
Local volume 80%
File being downloaded
Display a menu

Device Information provides information about the HW and IPAM Types, MAC and IP addresses, Network configuration and installed Store&Play and Linux versions.

System Status shows the System Time (UTC) and the Local Time of the device as well as the Uptime of the Exstreamer Store&Play.

Mass Storage Devices displays information about the mounted flash drives and its size and usage. It will also show the File System of those storage devices and if they are in read/write or read-only mode.

Application Status shows the same information as in the HOME tab regarding the current active Playlist and played Tracks.

Current player.cfg file in the STATUS tab prints in the screen the current configuration file being used by the Exstreamer Store&Play application.

Note the "**Force config update**" button that can be activated to force the device to fetch the player.cfg (and therefore forcing also a Music Update) from the CONFIG_SERVER defined in the current configuration file.

4.5 FILES tab

The FILES tab provides a listing of all the files present in the Player Directory of the selected Storage Media in the Exstreamer Store&Play.

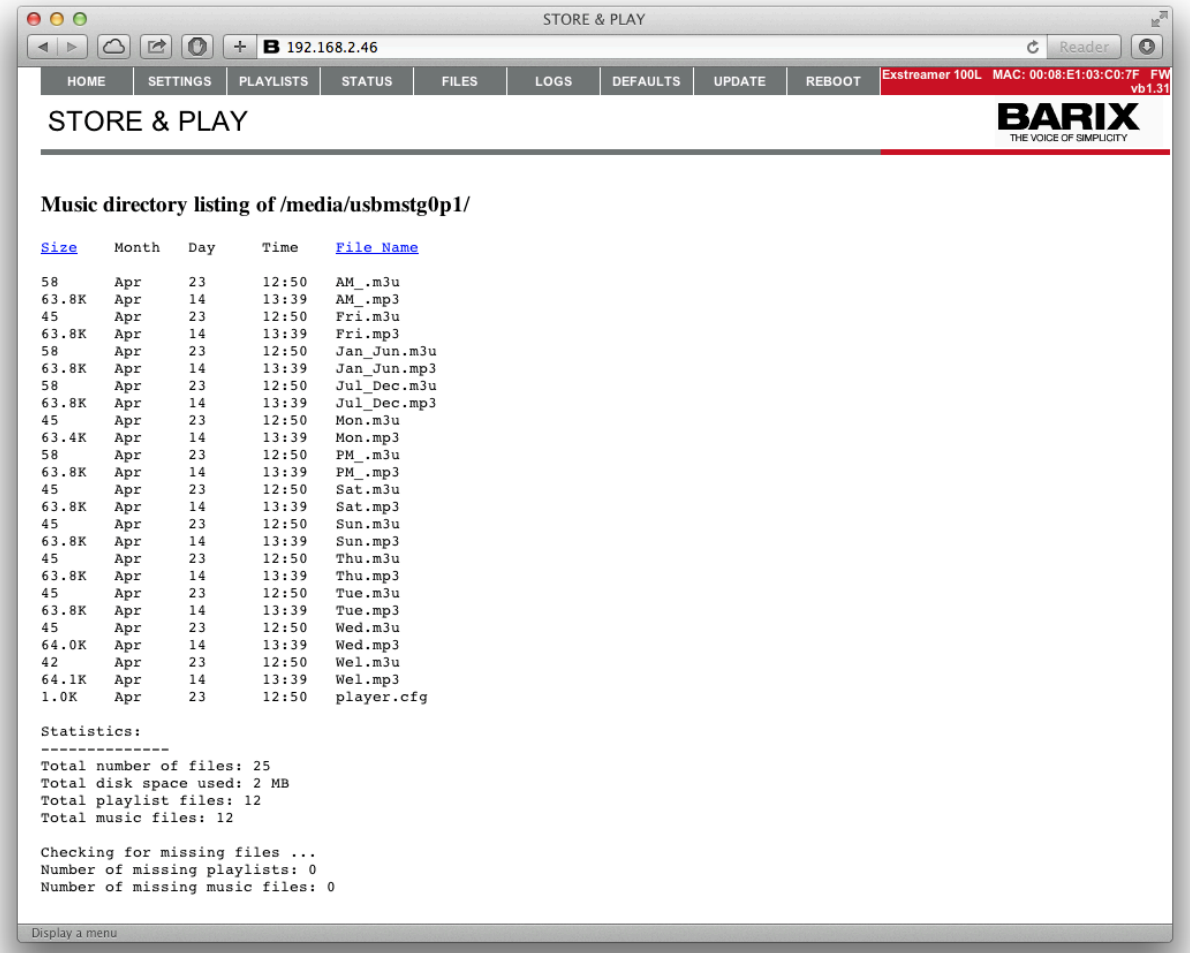

Note that it can take some time to provide all the information depending on the number and size of files to be listed.

In the **Statistics** section at the end of the file listing, the Exstreamer Store&Play will show a summary of the total number of files, the disk space used, the total number of playlist files and the total number of music (MP3) files. It will also display information regarding the missing playlists and music files according to the current configuration of the application.

4.6 LOGS tab

The LOGS tab shows two types of logs:

1) **System Log** is a Syslog extract with the latest messages
2) **Web access Log** is a log that shows the latest operations via the web UI of the device

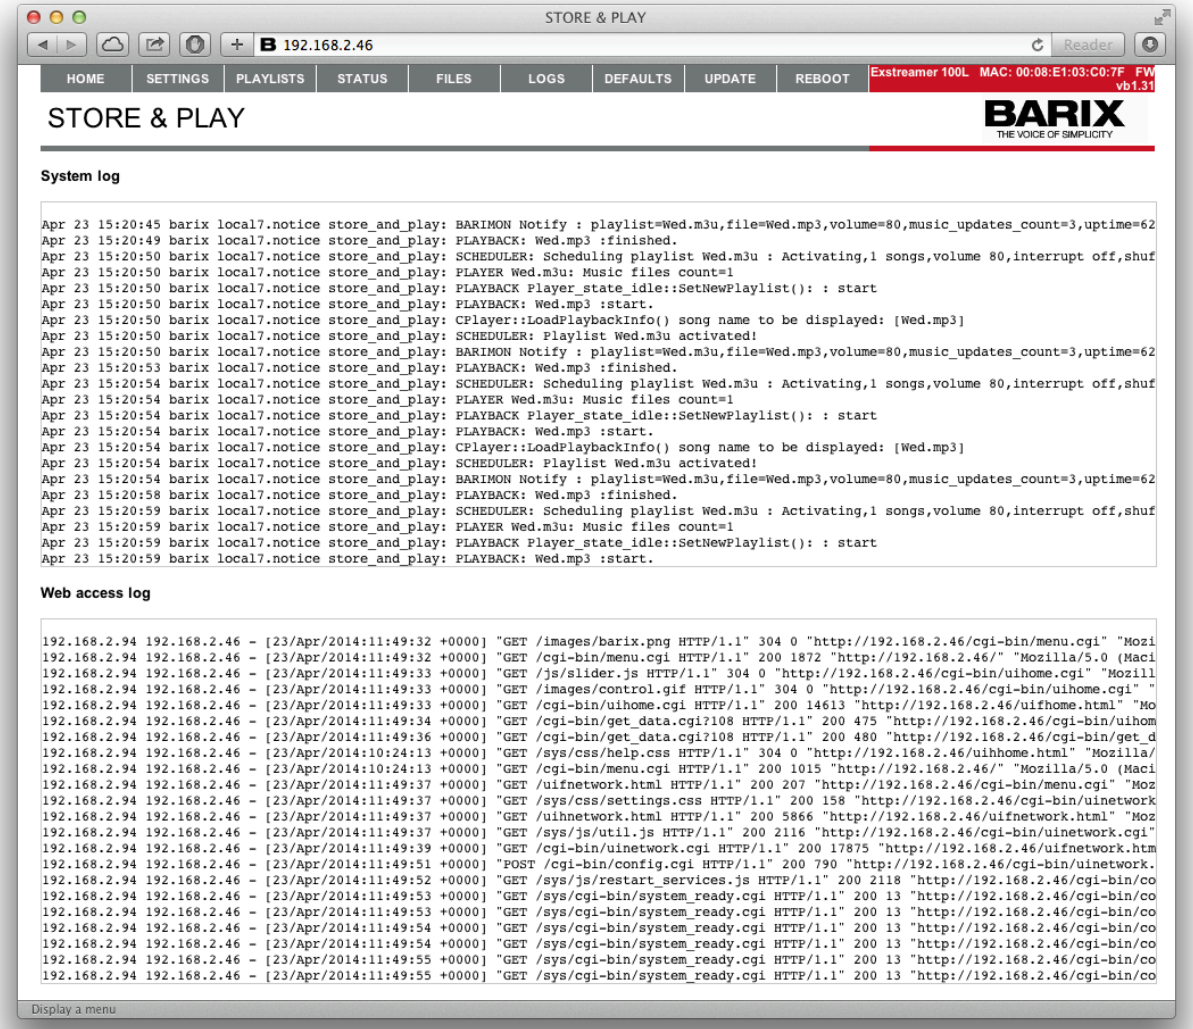
STORE & PLAY
192.168.2.46
Reader
HOME
SETTINGS
PLAYLISTS
STATUS
FILES
LOGS
DEFAULTS
UPDATE
REBOOT
Exstreamer 100L MAC: 00:08:E1:03:C0:7F FW vb1.31
STORE & PLAY
BARIX
THE VOICE OF SIMPLICITY
System log
Apr 23 15:20:45 barix local7.notice store_and_play: BARIMON Notify : playlist=Wed.m3u,file=Wed.mp3,volume=80,music_updates_count=3,uptime=62
Apr 23 15:20:49 barix local7.notice store_and_play: PLAYBACK: Wed.mp3 :finished.
Apr 23 15:20:50 barix local7.notice store_and_play: SCHEDULER: Scheduling playlist Wed.m3u : Activating,1 songs,volume 80,interrupt off,shuf
Apr 23 15:20:50 barix local7.notice store_and_play: PLAYER Wed.m3u: Music files count=1
Apr 23 15:20:50 barix local7.notice store_and_play: PLAYBACK Player_state_idle::SetNewPlaylist(): : start
Apr 23 15:20:50 barix local7.notice store_and_play: PLAYBACK: Wed.mp3 :start.
Apr 23 15:20:50 barix local7.notice store_and_play: CPlayer::LoadPlaybackInfo() song name to be displayed: [Wed.mp3]
Apr 23 15:20:50 barix local7.notice store_and_play: SCHEDULER: Playlist Wed.m3u activated!
Apr 23 15:20:50 barix local7.notice store_and_play: BARIMON Notify : playlist=Wed.m3u,file=Wed.mp3,volume=80,music_updates_count=3,uptime=62
Apr 23 15:20:53 barix local7.notice store_and_play: PLAYBACK: Wed.mp3 :finished.
Apr 23 15:20:54 barix local7.notice store_and_play: SCHEDULER: Scheduling playlist Wed.m3u : Activating,1 songs,volume 80,interrupt off,shuf
Apr 23 15:20:54 barix local7.notice store_and_play: PLAYER Wed.m3u: Music files count=1
Apr 23 15:20:54 barix local7.notice store_and_play: PLAYBACK Player_state_idle::SetNewPlaylist(): : start
Apr 23 15:20:54 barix local7.notice store_and_play: PLAYBACK: Wed.mp3 :start.
Apr 23 15:20:54 barix local7.notice store_and_play: CPlayer::LoadPlaybackInfo() song name to be displayed: [Wed.mp3]
Apr 23 15:20:54 barix local7.notice store_and_play: SCHEDULER: Playlist Wed.m3u activated!
Apr 23 15:20:54 barix local7.notice store_and_play: BARIMON Notify : playlist=Wed.m3u,file=Wed.mp3,volume=80,music_updates_count=3,uptime=62
Apr 23 15:20:58 barix local7.notice store_and_play: PLAYBACK: Wed.mp3 :finished.
Apr 23 15:20:59 barix local7.notice store_and_play: SCHEDULER: Scheduling playlist Wed.m3u : Activating,1 songs,volume 80,interrupt off,shuf
Apr 23 15:20:59 barix local7.notice store_and_play: PLAYER Wed.m3u: Music files count=1
Apr 23 15:20:59 barix local7.notice store_and_play: PLAYBACK Player_state_idle::SetNewPlaylist(): : start
Apr 23 15:20:59 barix local7.notice store_and_play: PLAYBACK: Wed.mp3 :start.
Web access log
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:32 +0000] "GET /images/barix.png HTTP/1.1" 304 0 "http://192.168.2.46/cgi-bin/menu.cgi" "Mozi
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:32 +0000] "GET /cgi-bin/menu.cgi HTTP/1.1" 200 1872 "http://192.168.2.46/" "Mozilla/5.0 (Maci
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:33 +0000] "GET /js/slider.js HTTP/1.1" 304 0 "http://192.168.2.46/cgi-bin/uihome.cgi" "Mozill
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:33 +0000] "GET /images/control.gif HTTP/1.1" 304 0 "http://192.168.2.46/cgi-bin/uihome.cgi" "
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:33 +0000] "GET /cgi-bin/uihome.cgi HTTP/1.1" 200 14613 "http://192.168.2.46/uifhome.html" "Mo
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:34 +0000] "GET /cgi-bin/get_data.cgi?108 HTTP/1.1" 200 475 "http://192.168.2.46/cgi-bin/uihom
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:36 +0000] "GET /cgi-bin/get_data.cgi?108 HTTP/1.1" 200 480 "http://192.168.2.46/cgi-bin/get_d
192.168.2.94 192.168.2.46 - [23/Apr/2014:10:24:13 +0000] "GET /sys/css/help.css HTTP/1.1" 304 0 "http://192.168.2.46/uihhome.html" "Mozilla/
192.168.2.94 192.168.2.46 - [23/Apr/2014:10:24:13 +0000] "GET /cgi-bin/menu.cgi HTTP/1.1" 200 1015 "http://192.168.2.46/" "Mozilla/5.0 (Maci
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:37 +0000] "GET /uifnetwork.html HTTP/1.1" 200 207 "http://192.168.2.46/cgi-bin/menu.cgi" "Moz
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:37 +0000] "GET /sys/css/settings.css HTTP/1.1" 200 158 "http://192.168.2.46/cgi-bin/uinetwork
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:37 +0000] "GET /uihnetwork.html HTTP/1.1" 200 5866 "http://192.168.2.46/uifnetwork.html" "Moz
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:37 +0000] "GET /sys/js/util.js HTTP/1.1" 200 2116 "http://192.168.2.46/cgi-bin/uinetwork.cgi"
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:39 +0000] "GET /cgi-bin/uinetwork.cgi HTTP/1.1" 200 17875 "http://192.168.2.46/uifnetwork.htm
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:51 +0000] "POST /cgi-bin/config.cgi HTTP/1.1" 200 790 "http://192.168.2.46/cgi-bin/uinetwork.
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:52 +0000] "GET /sys/js/restart_services.js HTTP/1.1" 200 2118 "http://192.168.2.46/cgi-bin/co
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:53 +0000] "GET /sys/cgi-bin/system_ready.cgi HTTP/1.1" 200 13 "http://192.168.2.46/cgi-bin/co
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:53 +0000] "GET /sys/cgi-bin/system_ready.cgi HTTP/1.1" 200 13 "http://192.168.2.46/cgi-bin/co
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:54 +0000] "GET /sys/cgi-bin/system_ready.cgi HTTP/1.1" 200 13 "http://192.168.2.46/cgi-bin/co
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:54 +0000] "GET /sys/cgi-bin/system_ready.cgi HTTP/1.1" 200 13 "http://192.168.2.46/cgi-bin/co
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:55 +0000] "GET /sys/cgi-bin/system_ready.cgi HTTP/1.1" 200 13 "http://192.168.2.46/cgi-bin/co
192.168.2.94 192.168.2.46 - [23/Apr/2014:11:49:55 +0000] "GET /sys/cgi-bin/system_ready.cgi HTTP/1.1" 200 13 "http://192.168.2.46/cgi-bin/co
Display a menu

The information displayed in these logs can be useful for quick troubleshooting purposes and diagnosis of the latest activities of the Store&Play application.

4.7 DEFAULTS tab

This tab can be used for resetting the device to some of its default settings and configuration defaults.

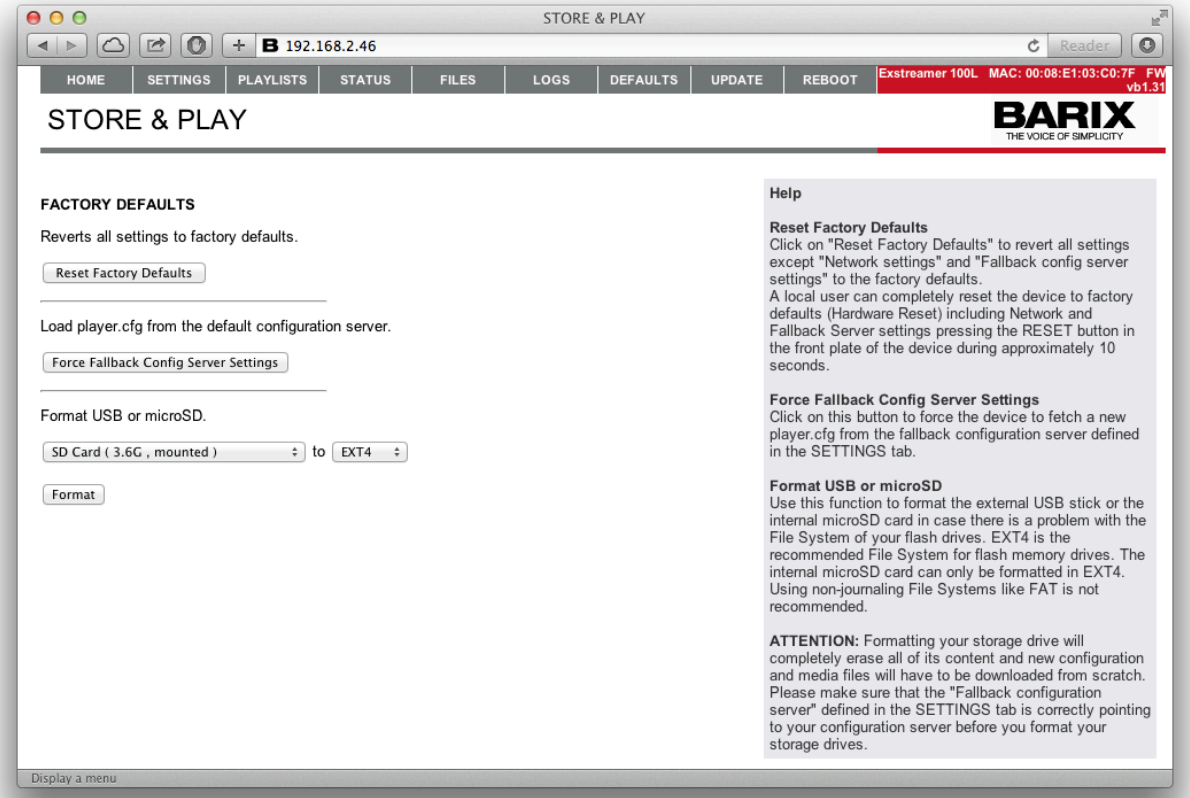
STORE & PLAY
192.168.2.46
Reader
HOME
SETTINGS
PLAYLISTS
STATUS
FILES
LOGS
DEFAULTS
UPDATE
REBOOT
Exstreamer 100L MAC: 00:08:E1:03:C0:7F FW vb1.31
STORE & PLAY
BARIX
THE VOICE OF SIMPLICITY
FACTORY DEFAULTS
Reverts all settings to factory defaults.
Reset Factory Defaults
Load player.cfg from the default configuration server.
Force Fallback Config Server Settings
Format USB or microSD.
SD Card (3.6G , mounted)
to
EXT4
Format
Help
Reset Factory Defaults
Click on "Reset Factory Defaults" to revert all settings except "Network settings" and "Fallback config server settings" to the factory defaults.
A local user can completely reset the device to factory defaults (Hardware Reset) including Network and Fallback Server settings pressing the RESET button in the front plate of the device during approximately 10 seconds.
Force Fallback Config Server Settings
Click on this button to force the device to fetch a new player.cfg from the fallback configuration server defined in the SETTINGS tab.
Format USB or microSD
Use this function to format the external USB stick or the internal microSD card in case there is a problem with the File System of your flash drives. EXT4 is the recommended File System for flash memory drives. The internal microSD card can only be formatted in EXT4. Using non-journaling File Systems like FAT is not recommended.
ATTENTION: Formatting your storage drive will completely erase all of its content and new configuration and media files will have to be downloaded from scratch. Please make sure that the "Fallback configuration server" defined in the SETTINGS tab is correctly pointing to your configuration server before you format your storage drives.
Display a menu

"**Reset Factory Defaults**" button is used for resetting all the settings from the SETTINGS tab except the **Network Settings** and the **Fallback config server settings** to its factory default values.

Note that if the user wants to make a complete reset of all the settings to its factory defaults (including Network and Fallback config server settings) he can use the "Hardware reset" functionality by pressing the RESET button in the front plate of the device during approximately 10 seconds.

"**Force Fallback Config Server**" button allows the user to force the Exstreamer Store&Play to download and use the player.cfg that is stored on the CONFIG_SERVER defined in the fallback config server settings in the SETTINGS tab.

"**Format USB or microSD**" allows the user to perform a complete formatting of the Storage Media devices to EXT4 or FAT (the latter only allowed on external USB memory sticks). As mentioned previously, EXT4 is the only recommended File System format to be used in the Store&Play application.

Note that formatting the Storage Media will completely erase all of its contents and will force the Exstreamer Store&Play to use the Fallback configuration server to try to fetch a new player.cfg.

4.8 UPDATE tab

This tab is used for updating the Store&Play application to the latest version. BARIX recommends keeping the software up to date to be able to enjoy the most advanced features. Users should check www.barix.com frequently or ask BARIX sales representative to make sure the latest versions of Store&Play are installed in the devices.

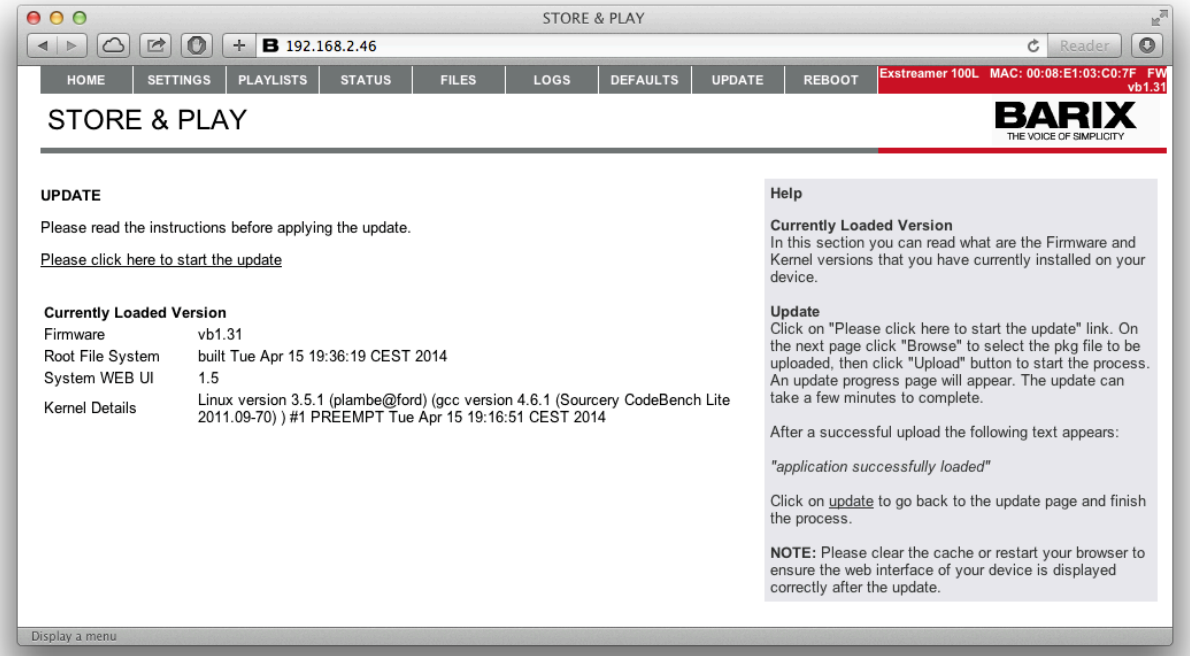
STORE & PLAY
192.168.2.46
Reader
HOME
SETTINGS
PLAYLISTS
STATUS
FILES
LOGS
DEFAULTS
UPDATE
REBOOT
Exstreamer 100L MAC: 00:08:E1:03:C0:7F FW vb1.31
STORE & PLAY
BARIX
THE VOICE OF SIMPLICITY
UPDATE
Please read the instructions before applying the update.
Please click here to start the update
Currently Loaded Version
Firmware vb1.31
Root File System built Tue Apr 15 19:36:19 CEST 2014
System WEB UI 1.5
Kernel Details Linux version 3.5.1 (plambe@ford) (gcc version 4.6.1 (Sourcery CodeBench Lite 2011.09-70)) #1 PREEMPT Tue Apr 15 19:16:51 CEST 2014
Help
Currently Loaded Version
In this section you can read what are the Firmware and Kernel versions that you have currently installed on your device.
Update
Click on "Please click here to start the update" link. On the next page click "Browse" to select the pkg file to be uploaded, then click "Upload" button to start the process. An update progress page will appear. The update can take a few minutes to complete.
After a successful upload the following text appears:
"application successfully loaded"
Click on update to go back to the update page and finish the process.
NOTE: Please clear the cache or restart your browser to ensure the web interface of your device is displayed correctly after the update.
Display a menu

The Update process is very simple. Start by clicking "**Please click here to start update**" to enter the bootloader mode. Then **browse** the local hard drive and **select** the downloaded PKG file with the latest version package and **upload** it to the device.

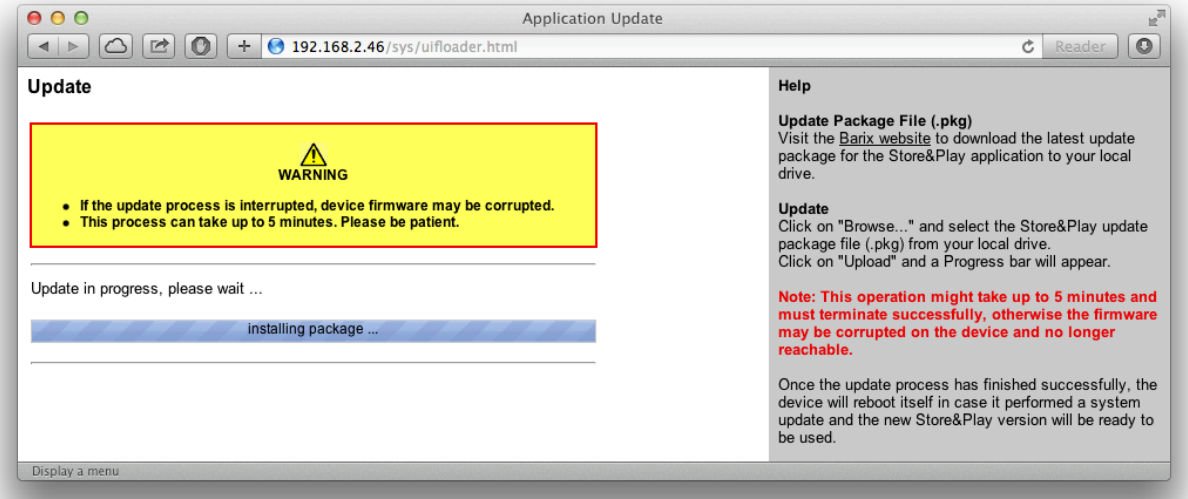
Application Update
192.168.2.46/sys/uifloader.html
Reader
Update
WARNING
If the update process is interrupted, device firmware may be corrupted.
This process can take up to 5 minutes. Please be patient.
Update in progress, please wait ...
installing package ...
Help
Update Package File (.pkg)
Visit the Barix website to download the latest update package for the Store&Play application to your local drive.
Update
Click on "Browse..." and select the Store&Play update package file (.pkg) from your local drive.
Click on "Upload" and a Progress bar will appear.
Note: This operation might take up to 5 minutes and must terminate successfully, otherwise the firmware may be corrupted on the device and no longer reachable.
Once the update process has finished successfully, the device will reboot itself in case it performed a system update and the new Store&Play version will be ready to be used.
Display a menu

After a few minutes (please be patient since it can take some time) the device will restart automatically with the latest version already installed and ready to use.

4.9 REBOOT tab

The REBOOT tab gives access to the “Reboot the device” button that reboots the device.

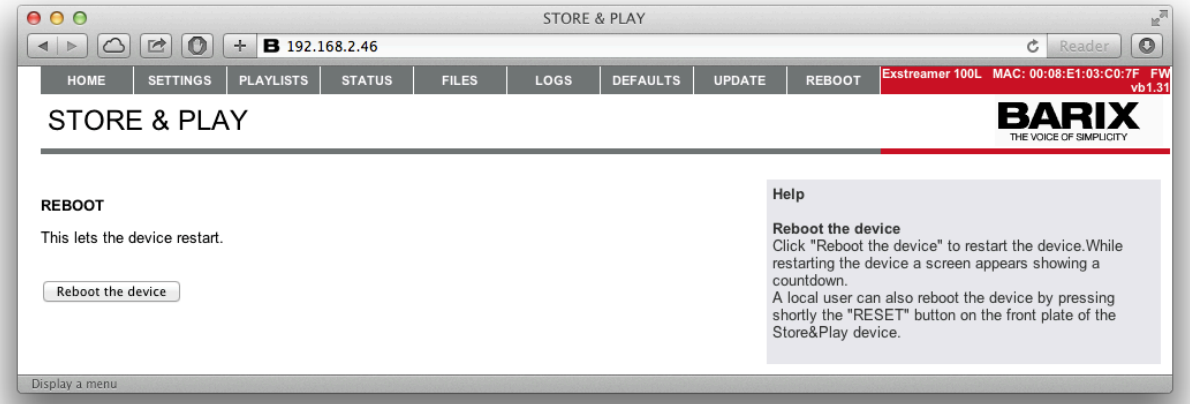

Note that in order to be able to perform the reboot, this function has to be enabled in the SECURITY SETTINGS in the SETTINGS tab.

5 Dictionary

DHCP	Short for Dynamic Host Configuration Protocol, a protocol used to assign an IP address to a device connected to a Network.
IP	Short for Internet Protocol, the IP is an address of a computer or other network device on a network using IP or TCP/IP. Every device on an IP-based network requires an IP address to identify its location or address on the network. Example: 192.168.2.10
MAC address	Abbreviation for Medium Access Control, a MAC is a unique address number formatted in hexadecimal format and given to each computer and/or network device on a computer network. Because a MAC address is a unique address a computer network will not have the same MAC address assigned to more than one computer or network device. Example: A1:B2:C3:D4:E5:F6
Netmask	A number used to identify a sub network so that an IP address can be shared on a LAN (Local Area Network). A mask is used to determine what subnet an IP address belongs to. An IP address has two components, the network address and the host address. For example, consider the IP address 150.215.17.009. Assuming this is part of a Class B network, the first two numbers (150.2) represent the Class B network address, and the second two numbers (.017.009) identify a particular host on this network. The Netmask would then be 255.255.0.0
Ping	Ping is a basic Internet program that lets the user verify that a particular IP address exists and can accept requests. Example: ping 192.168.2.10
SonicIP	Barix SonicIP® technology is designed to vocally announce the Barix devices current IP address. This makes it easier and faster to obtain the necessary network information. To make use of SonicIP plug in the included earphone into RCA audio out, connect the network and plug in the power supply. It will announce the address over the earphones right after power up.
Static IP	A Static IP is a fixed IP address that the user assigns manually to a device on the network. It remains valid until the user disables it.

6 Appendix: Quick Install Guide

BARIX

EXSTREAMER
Store & Play

Quick Install Guide
Version 1.1

Networked IP Audio Decoder

Package contents

a Exstreamer Store&Play
b Power supply (except NoPSU version)
c MicroSD internal memory card (except NoSD version)

Cable Set AUDIO (not included)

d Earphone
e RCA Stereo cable
f Network cable
g Serial cable

Firmware

This device comes preloaded with the Store&Play firmware and can be used out of the box without having to install any additional firmware. The installed firmware version can be seen in the web UI of the device. Check for Store&Play most recent firmware version at www.barix.com.

Support

For support please contact the local dealer or visit www.barix.com.

© Barix AG 2/2014, all rights reserved. All information is subject to change without notice. All mentioned trademarks belong to their respective owners and are used for reference only. Barix, Exstreamer and SonicIP are trademarks of Barix AG, Switzerland, and are registered in certain countries.

Front view

Rear view

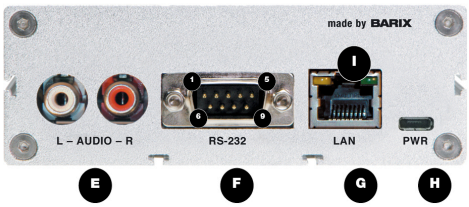

A Reset button

A brief press of the button will reset the device. Holding the reset button pressed in for approximately 10 seconds (until the red LED starts flashing) will reset the device and restore the factory default settings when the button is released.

B EXT.

USB 2.0 interface for flash memory sticks
(not supplied)

C Status LEDs

Green and red LEDs for status display

D Headphone out

Standard stereo mini jack (3.5 mm)

E Line out

Stereo RCA line outputs

F RS-232 serial port (DSub 9 pin male)

Pin	Description
1	Not connected
2	Receive Data [RxD]
3	Transmit Data [TxD]
4	V+ 5V, 100mA max
5	Ground [GND]
6	Not connected
7	Ready to Send [RTS]
8	Clear to Send [CTS]
9	Not connected

G LAN port 10/100 (RJ45 Ethernet socket)

Pin	Description
1	Tx +
2	Tx -
3	Rx +
4	Not connected
5	Not connected
6	Rx -
7	Not connected
8	Not connected

H Power

Standard microUSB, 5 VDC, 2 Watt max.

I LAN status LEDs

Green LED for Link status, yellow LED for Activity status

1 Installation

STEP 1

Plug a standard (straight) network cable (f, not included) into the network port (G) of the Exstreamer and the other end into the hub or switch. A crossover network cable (not included) can also be used for a direct connection to the PC.

STEP 2

i) Plug standard headphones or the earphone (d, not included) into the headphone output (D) and listen.

ii) Plug the RCA cable (e) into the LINE OUT outputs (E) and connect the cable to inputs of your mixing console or monitoring device.

iii) OPTIONAL (*): Plug a USB memory stick containing at least the configuration file (player.cfg). If the playlists (.M3U) and corresponding audio tracks (.MP3) are already on the USB stick, the device won't have to download them from the content server before starting playback.

(*) The Exstreamer Store&Play includes an internal microSD memory card (except NoSD model) that can be used as local storage instead of the USB memory stick.

STEP 3

Connect the Power supply (b) to the device (socket H) and then to an appropriate electrical outlet.

STEP 4

i) The Exstreamer Store&Play will now acquire an IP address and announce it over the audio outputs. DHCP is the default method for acquiring automatically an IP address from the DHCP server in the network.

ii) If audio outputs were not connected in Step 2 and the SonicIP® announcement of acquired IP address was not heard, it is recommended to use the "Barix Discovery Tool" Java application (download the latest version from www.barix.com under "Software Tools" in "Downloads" section) on your computer (Windows, Mac or Linux) and click the "Get" button to find out which IP address the device has obtained (see picture at the bottom of the page). Make sure that the Ethernet address (MAC) matches the one of the device (see label on the bottom of the device).

Now that the IP address of the Exstreamer Store&Play is known, it is time to proceed to the next section for "Network configuration via web browser". If the device's current IP address was not discovered with the previous steps, see section "Troubleshooting".

2 Network configuration from web browser

The BARIX Store&Play application does not require any initial network configuration since it's using DHCP by default to configure network settings dynamically. If a static (fixed) network setting needs to be used, please follow steps 1 to 3, otherwise continue from step 4.

STEP 1

Open a web browser and type the IP address that was announced by the Exstreamer Store&Play during boot-up (e.g.: 192.168.0.12) and press Enter.

STEP 2

Click on the "SETTINGS" tab and select "Static" on the drop-down menu next to "Protocol" field (by default is set to "DHCP") under the "NETWORK SETTINGS" section.

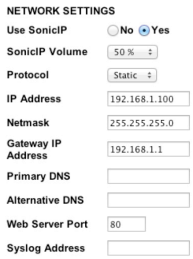

STEP 3

Set the IP Address, Netmask, Gateway, Primary DNS and Alternative DNS. Specifying the web server port to be used (default port is 80) is also possible. Syslog messages are sent from the Store&Play device to the destination IP address of the device where you will be collecting them.

STEP 4

Click "Submit" at the bottom of the page for the changes to take effect.

Please download the Store&Play User Manual from www.barix.com for more details about further configuration options.

3 Troubleshooting

- If the status LEDs (C) stay dark check the power cabling (installation step 3).
- Check if the green LINK LED (I) is lit, if it is not then check your network cabling (network port G)
- If current device settings are uncertain, the device can revert to its factory defaults by pressing the Reset button (A) until the red status LED (C) blinks (takes about 10 seconds). The device will restore the factory defaults once the button is released.

For information about BARIX products, manuals, technical documentation, latest firmware, support and access to the user forum please visit www.barix.com.



7 Legal Information

© 2014 Barix AG, Zurich, Switzerland.
All rights reserved.
All information is subject to change without notice.
All mentioned trademarks belong to their respective owners and are used for reference only.
Barix, Exstreamer, Instreamer, SonicIP and IPzator are trademarks of Barix AG, Switzerland and are registered in certain countries. For information about our devices and the latest version of this manual please visit www.barix.com.

Barix AG
Seefeldstrasse 303
8008 Zurich
SWITZERLAND

Phone: +41 43 433 22 11
Fax: +41 44 274 28 49

Internet
web: www.barix.com
email: sales@barix.com
support: support@barix.com